


NETAJET™ 4G

USER MANUAL

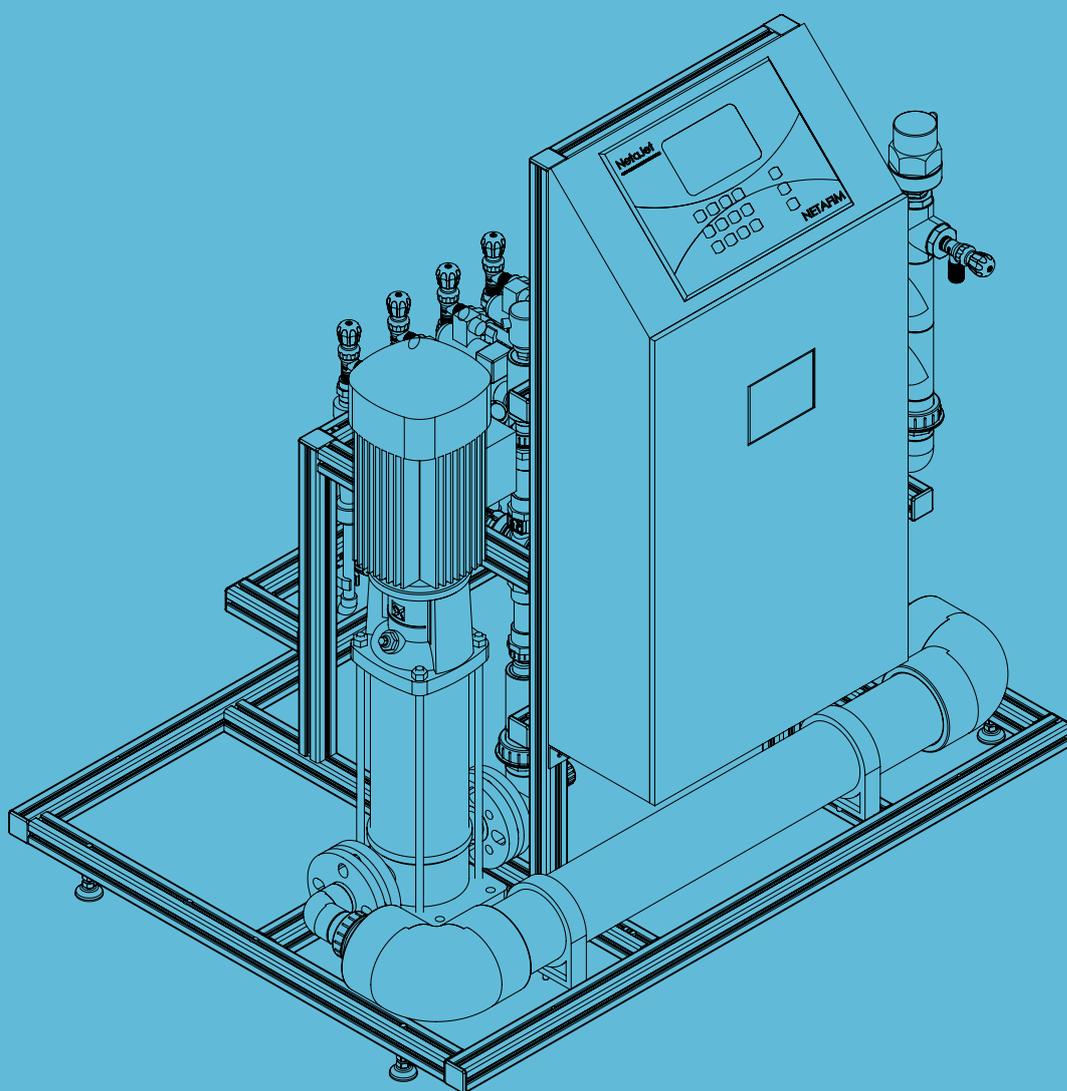

USE OF SYMBOLS

The symbols used in this manual refer to the following:



WARNING

Contains instructions aimed at preventing bodily injury or direct damage to the crops, the product and/or the infrastructure.



CAUTION

Contains instructions aimed at preventing unwanted system operation, installation or conditions that, if not followed, might void the warranty.



ATTENTION

Contains instructions aimed at enhancing the efficiency of usage of the instructions in the manual.



NOTE

Contains instructions aimed at emphasizing certain aspects of the operation of the system or installation.



ACID HAZARD

Contains instructions aimed at preventing bodily injury or direct damage to the crops, the product and/or the infrastructure in the presence of acid.



PROTECTIVE EQUIPMENT

Contains instructions aimed at preventing damage to health or bodily injury in the presence of fertilizers, acid or other chemicals.

© COPYRIGHT 2020, NETAJET™

NO PARTS OF THIS PUBLICATION MAY BE REPRODUCED, STORED IN AN AUTOMATED DATA FILE OR MADE PUBLIC IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, BY PHOTOCOPYING, RECORDING OR IN ANY OTHER MANNER WITHOUT PRIOR WRITTEN PERMISSION OF THE PUBLISHER.

ALTHOUGH NETAJET™ TAKES THE GREATEST POSSIBLE CARE IN DESIGNING AND PRODUCING BOTH ITS PRODUCTS AND THE ASSOCIATED DOCUMENTATION, THEY MAY STILL INCLUDE FAULTS.

NETAJET™ WILL NOT ACCEPT RESPONSIBILITY FOR DAMAGE RESULTING FROM THE USE OF NETAJET'S PRODUCTS OR THE USE OF THIS MANUAL.

NETAJET™ RESERVES THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS TO ITS PRODUCTS AND/OR THE ASSOCIATED DOCUMENTATION WITHOUT PRIOR NOTICE.



FOREIGN LANGUAGES

In the event that you are reading this manual in a language other than the English language, you acknowledge and agree that the English language version shall prevail in case of inconsistency or contradiction in interpretation or translation.

CONTENTS

Use of symbols	2
Safety	
Safety instructions	4
When using acid/chemicals	5
Description	
Features	6
Highlights	6
Advantages	6
Operating principle	6
Main components	6
Analog dosing channel	7
Dual dosing channel	7
Capabilities	8
Service	8
Maintenance	8
Add-ons	8
Modes	9
Main parts of the NetaJet™ 4G and its infrastructure	9
BP PL mode	10
BP ST mode	12
High-flow mode	14
Octa - 8-channel mode	16
IL PL mode	18
IL ST mode	20
Operation and maintenance	
Operation	22
Maintenance	23
Winterization	24
Troubleshooting	
Symptoms regarding more than one single dosing channel	25
Symptoms regarding a single dosing channel	26
Symptoms while idle	28
The NetaJet™ 4G does not function at all	29
System vibrations	29
Dosing calibration	
1. Calculation of dosing channels opening percentage	30
2. Simulation with a 10-liter (2-US-gallon) bucket of water	30
3. Calibration of the NetaJet™ 4G while irrigating	32
List of parts	
BP PL mode	34
BP ST mode	35
High-flow mode	36
Octa - 8-channel mode	37
IL PL mode	38
IL ST mode	39
Dosing channels	42
Venturis	43
Dosing boosters	44
Netajet 4g hydraulic condition checklist	45
Warranty	46

SAFETY



CAUTION

Read the safety instructions before using, maintaining or troubleshooting the NetaJet™ 4G.

Safety instructions

- All safety regulations must be applied.
- Ensure that the installation is carried out in a manner that prevents leaks from the NetaJet™ 4G, the fertilizer/acid tanks and lines, the peripherals and the accessories (contaminating the environment, soil or ambient area).
- When using acid, always observe the acid manufacturer's safety instructions.
- Electrical installation and troubleshooting should be performed by an authorized electrician only.
- The electrical installation must comply with the local safety standards and regulations.
- Installation should be performed by authorized technicians only.
- Protection provided by the equipment can be impaired if the equipment is used in a manner other than that specified by the manufacturer.



WARNING

In agricultural environments - always wear protective footwear.



WARNING

Always use protective equipment, gloves and goggles when handling fertilizers, acid and other chemicals!



WARNING

Measures must be taken to prevent fertilizer infiltration of the water source, to avoid water pollution.



CAUTION

When opening or closing any manual valve, always do so gradually, to prevent damage to the system by water hammer.



NOTE

The maximum sound level produced by the equipment does not exceed 70dB.

SAFETY

Safety instructions when using acid/chemicals



ACID HAZARD

When using acid - always observe the acid manufacturer's safety instructions.



WARNING

Always use protective equipment, gloves and goggles when handling fertilizers, acid and other chemicals!



CAUTION

High concentrations of some fertilizer combinations might induce crystallization in the NetaJet's lower manifold and cause clogging of the pipes. **These combinations should never be used in any concentration in the dual dosing channel (Octa mode only)!**

Fertilizer combinations prone to induce crystallization:

- Calcium nitrate + ammonium sulfate => calcium sulfate
- Calcium nitrate + potassium sulfate => calcium sulfate
- MKP + calcium nitrate => calcium phosphate
- MAP + calcium nitrate => calcium phosphate
- Phosphoric acid + calcium nitrate => calcium phosphate

When injecting these fertilizer combinations:

- Make sure to dilute each fertilizer to the allowed concentration in the fertilizer tank prior to injection through the NetaJet™ 4G.
- Immediately after each injection of any of the fertilizer combinations above, flush the NetaJet™ 4G with clean water for at least 2 minutes.

In case of doubt regarding the use of any combination of fertilizers, contact your local Netafim™ representative.



ATTENTION

When dosing acid, use a dosing channel fitted with the appropriate components according to the type and concentration of acid used*:

Type of dosing channel	Diaphragm and O-rings	For pH correction					For maintenance of drippers		
		Nitric acid (HNO ₃)	Phosphoric acid (H ₃ PO ₄)	Sulfuric acid (H ₂ SO ₄)	Potassium hydroxide (KOH)	Acetic acid (CH ₃ COOH)	Hydrochloric (HCl)	Hydrogen peroxide (H ₂ O ₂)	Chlorine (as hypochloride)
For diluted acid	EPDM	<3%	<85%	<30%	<35%	<30%	<10%	<30%	<1%
For concentrated acid	Viton	<40%	<85%	<90%	<10%	<5%	<33%	<50%	<10%

% is by weight at 21°C (70°F)

*The table indicates the resistance of the dosing channel components to acid, and is not a recommendation to use the acids mentioned.



WARNING

Exceeding the recommended acid concentrations will damage the dosing channels.



WARNING

Substances such as chemicals for pest/disease control might be corrosive and damage the NetaJet™ 4G. When using any substance other than fertilizers or acids not exceeding the concentrations in the table above, always observe the manufacturer's instructions for corrosivity. In case of any doubt, contact your local Netafim™ representative.

DESCRIPTION

Features

- The NetaJet™ 4G realizes Netafim's "grow more with less" concept. Based on Netafim's unique Nutrigation™ technology, it controls the amount of water and fertilizers used, optimizing resource utilization for each specific crop and soil/substrate type.
- The NetaJet™ 4G is extremely accurate and reliable, preventing water and fertilizer waste while reducing environmental pollution.
- The NetaJet™ 4G ensures very precise and homogeneous nutrient dosing for greenhouse crops.
- The NetaJet™ 4G is a modular CE-compliant dosing system that easily integrates with multiple Netafim™ and third-party control and monitoring systems.
- The NetaJet™ 4G always injects a uniform quantity of nutrients while performing perfect EC and pH control.
- The NetaJet™ 4G can accommodate a wide variety of dosing channels for fertilizer and concentrated/diluted acid.
- The NetaJet™ 4G accommodates a wide variety of system pumps, peripherals and accessories to meet a vast range of applications and infrastructure constraints.

Highlights

- Equipped with Netafim's unique innovative analog dosing channels for very accurate and reliable EC/pH control.
- Provides fast and accurate fertilizer and acid control.
- State-of-the-art technology with unique static mixing chamber
- Short control cycle
- Efficient water, fertilizer and energy consumption
- Guaranteed EC and pH control
- Almost completely maintenance-free Venturi operations – no moving parts
- Highly accurate dosing channels
- Fast and efficient Nutrigation™ recipe adjustments
- Multi-lingual capabilities
- Made by Netafim™

Advantages

- Easy system installation and maintenance
- In-house developed offering
- Versatile flow capacity
- Covers all applications ranging from greenhouse in soil, to very intensive soilless media
- Requires minimal investment with rapid ROI

Operating principle

The NetaJet™ 4G doses the various fertilizers and acids into a homogeneous solution in its unique HidroMix static mixing chamber and injects it into the irrigation water main line.

The suction of the fertilizers and acid in the dosing channels is based on the Venturi principle. This requires a pressure differentiation - available on the main line or supplied by the main line pump or the NetaJet's dosing booster.

Main components

- HydroMix static mixing chamber
- A compensation channel with a pressure regulator
- Factory-installed PRV at the inlet and a PSV at the outlet
- Selectable analog dosing channels
- Dual EC/pH monitoring and control
- Quick-action dosing valves
- Wide range of integrated accessories and peripherals
- High-quality components and PVC piping
- Aluminum, corrosion-resistant frame with adjustable legs

DESCRIPTION

Analog dosing channel

The NetaJet™ 4G is the first fertilizer-dosing system equipped with Netafim's unique innovative analog dosing channel.

The analog dosing channel is the long-awaited solution for very accurate and reliable EC/pH control for Nutrigation™ of high-value greenhouse crops.

The analog dosing channel is equipped with a servo motor capable of continuous variable opening from 0 to 100%. This unique feature allows unprecedented precise and seamless Nutrigation™.

Advantages


- Ultra-high precision
- Smooth and stable hydraulic operation
- No fluctuations
- Fast EC/pH set-point reaching
- Short stabilization time
- Enables short Nutrigation™ cycles
- No risk of cavitation damage to the booster

Stabilization time

The analog dosing channel offers the benefit of a significantly shorter stabilization time compared with the digital (pulsating) dosing channel (up to 50%). This is particularly beneficial when performing short Nutrigation™ cycles typical of greenhouse crops.

- X = Analog (continuous-variable) dosing channel
- Y = Digital (pulsating) dosing channel

Digital (ON/OFF) vs. analog dosing channel performances

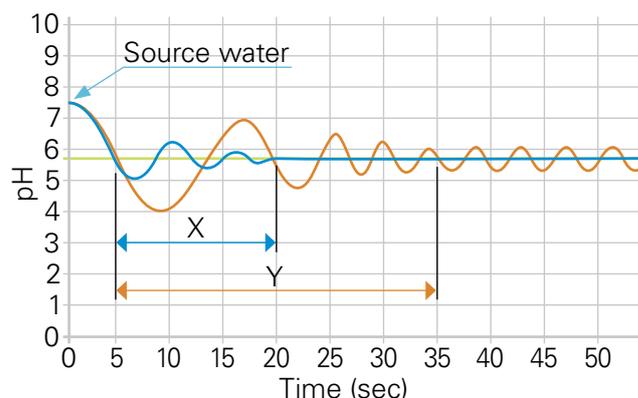


- Analog (continuous-variable) dosing channel
- Digital (pulsating) dosing channel
- pH set point


Dual dosing channel

The NetaJet™ 4G Octa mode (8 dosing channels) includes 3 dual dosing channel. The dual dosing channel is applicable with 50 l/h (13 GPH) and 600 l/h (158 GPH) Venturis.

Dual dosing channel schematic diagram

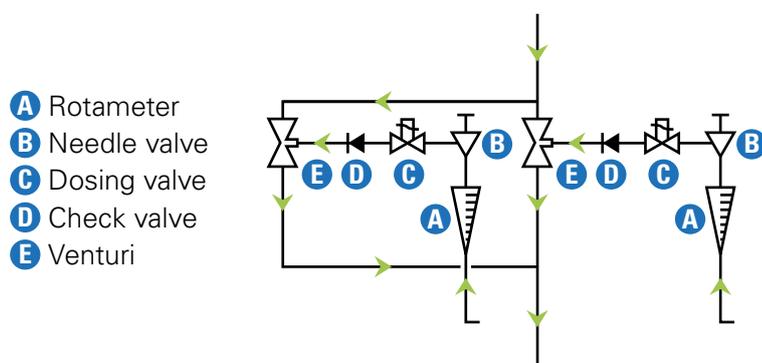

- Ⓐ Rotameter
- Ⓑ Needle valve
- Ⓒ Dosing valve
- Ⓓ Check valve
- Ⓔ Venturi

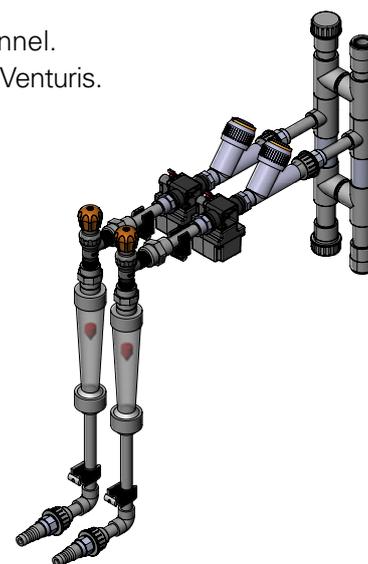

CAUTION

There are fertilizer combinations that should **never** be used in any concentration in the dual dosing channel! (see [CAUTION](#), page 5)

DESCRIPTION

Capabilities

NetaJet™ 4G modes fed by a pressurised main line are suitable for a vast range of main line pressures

- Standard: 2.5 - 5.8 bar (36.5 - 84.0 PSI)
- High pressure: 5.8 - 7.5 bar (84.0 - 108.5 PSI)

For main line pressures lower than 2.5 bar (36.5 PSI), consult Netafim™.

NetaJet™ 4G modes fed by a storage tank

The water level in the storage tank should not be higher than 5 meters (16.4 feet) above the NetaJet™ 4G inlet.

Various dosing channel configuration options

- Most modes: Up to 5 highly accurate dosing channels of various types, from 50 l/hr (13 GPH) up to 600 l/hr (158 GPH) each.
- Octa mode: Up to 8 highly accurate dosing channels of various types, from 50 l/hr (13 GPH) up to 600 l/hr (158 GPH) each.
- High-flow mode: Up to 5 highly accurate dosing channels of various types, from 50 l/hr (13 GPH) up to 1000 l/hr (264 GPH) each.

Service

The NetaJet™ 4G utilizes modular construction, making servicing a simple and quick process.

The dealer keeps a small quantity of interchangeable components on hand, for replacement on site within a few minutes.

Maintenance

To prevent failures and extend the life cycle of the NetaJet™ 4G, regular maintenance must be carried out by the user, such as periodic rinsing of filters and calibration of the EC and pH sensors.

Regular maintenance of the NetaJet™ 4G is a time- and cost-efficient process requiring no special tools or skills.

Add-ons

You can extend the functionality of your NetaJet™ 4G by means of the wide variety of useful add-ons. All the add-ons are easy to connect to the NetaJet™ 4G - here are a few examples:

Fertilizer meter with electric output

Enables continuous reading of fertilizer dosing. Useful in applications where the customer wants a broader indication of fertilizer flow in addition to the EC and pH readings. Installed externally, controlled and monitored by the NetaJet™ 4G NMC Pro controller.

Stock selection

Enables the dosing of multiple fertilizers through a single dosing channel (in cases where simultaneous dosing is not required). Available in a wide variety of configurations, from a single channel with 2 fertilizers to as many channels and fertilizers as required. Installed externally, controlled and monitored by the NetaJet™ 4G NMC Pro controller.

For further information on the NetaJet™ 4G add-ons, consult Netafim™.

DESCRIPTION

Modes

- **BP PL:** Bypass system for pressurized-line water source; 5 dosing channels (see [page 10](#))
- **BP ST:** Bypass system for storage-tank water source; 5 dosing channels (see [page 12](#))
- **High-flow:** High-flow bypass system for pressurized-line water source; 5 dosing channels (see [page 14](#))
- **Octa - 8-channel:** Bypass system for pressurized-line water source; 6-8 dosing channels (see [page 16](#))
- **IL PL:** Inline system for pressurized-line water source; 5 dosing channels (see [page 18](#))
- **IL ST:** Inline system for storage-tank water source; 5 dosing channels (see [page 20](#))

Legend:

BP	Bypass
IL	Inline
PL	Pressurized line
ST	Storage tank

Main parts of the NetaJet™ 4G and its infrastructure


The list below presents the main parts of the NetaJet™ 4G and the parts of the infrastructure required for the operation of the NetaJet™ 4G various modes.

- | | | |
|----------------------------------|------------------------------------|--|
| 1 Dosing channel + Venturi | 12 EC sensor | 23 Main line pump |
| 2 Dual dosing channel + Venturis | 13 Dosing booster | 24 Main line filter |
| 3 Inlet pressure gauge | 14 Check valve | 25 Main line water meter |
| 4 Outlet pressure gauge | 15 Pressure switch | 26 Main line pressure sustaining valve (PSV) |
| 5 Lower manifold pressure gauge | 16 Pressure sustaining valve (PSV) | 27 Manual valve (isolation) |
| 6 Main line pressure gauge | 17 Pressure reducing valve (PRV) | 28 Irrigation valve |
| 7 Sampling outlet | 18 Air release valve | 29 Fertilizer/acid filter |
| 8 Controller | 19 Mixing chamber | 30 Manual valve (fertilizer) |
| 9 EC/pH transducer | 20 Compensation channel | 31 Fertilizer/acid stock tank |
| 10 Dosing booster switchbox | 21 Onboard main line pump | |
| 11 pH sensor | 22 Upper manifold filter | |

Color code: ● Supplied (part of the NetaJet™ 4G) ● Not supplied (part of infrastructure).

DESCRIPTION

BP PL mode

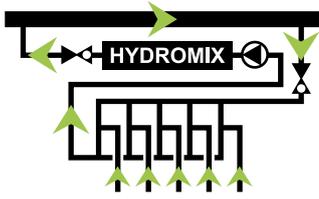

Bypass system for pressurized-line water source.

Operating principle:

The pressure differential required to generate fertilizer suction via the Venturis is produced by a booster pump integrated in the NetaJet™ 4G. This mode of operation, where the lower manifold is under low pressure (around 0 bar/PSI), permits the use of high-efficiency Venturis with high suction capacity and low motive flow consumption.

Suitable for main line flow rate:

20-120 m³/h (90-500 GPM)

Flow limitation depends on the fertilizer injection rate and the size of the Venturis.

Suitable for main line pressure:

- Standard: 2.5-5.8 bar (36.5-84.0 PSI)
- High pressure: 5.8-7.5 bar (84.0-108.5 PSI)

For main line pressures lower than 2.5 bar (36.5 PSI), consult Netafim™.

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 5 dosing channels of various types, from 50 l/hr (13 GPH) up to 600 l/hr (158 GPH) each.
- Optional - Concentrated acid channel, 50 l/h (13 GPH).

Total fertilizer/acid suction capacity - up to 3000 l/h (792 GPH).


Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.

Front view

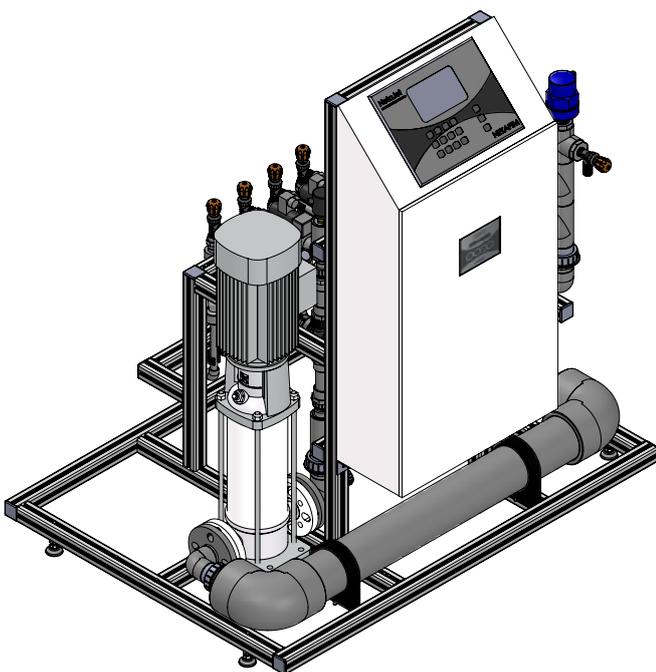


Back view

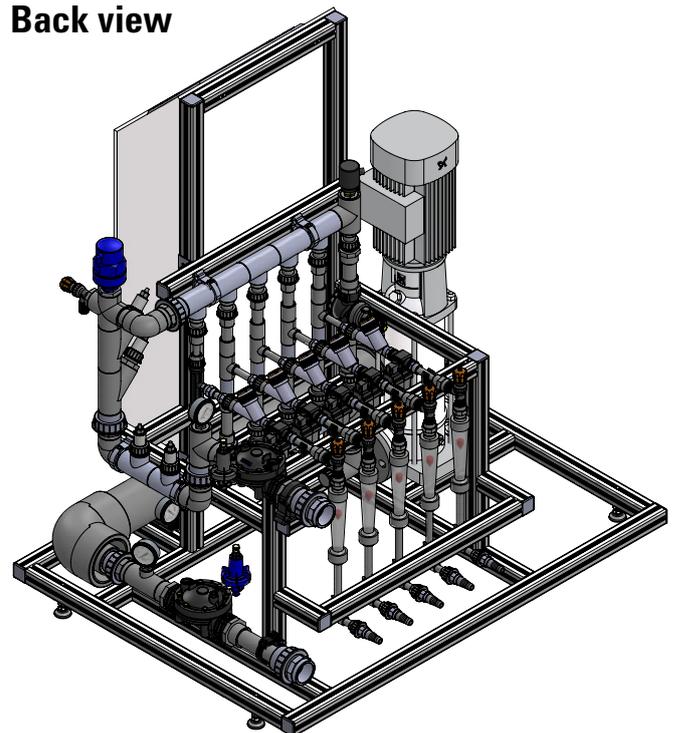


DESCRIPTION

BP PL mode - typical setup

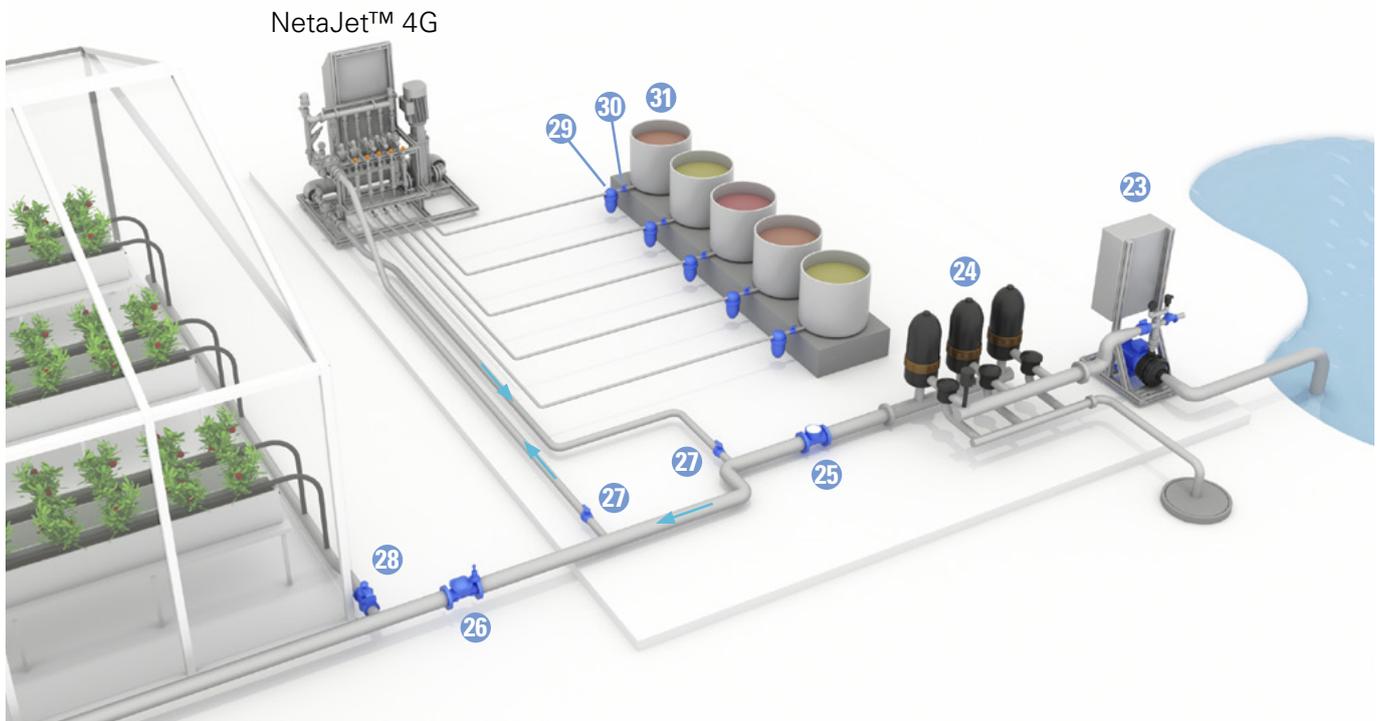


Schematic diagram

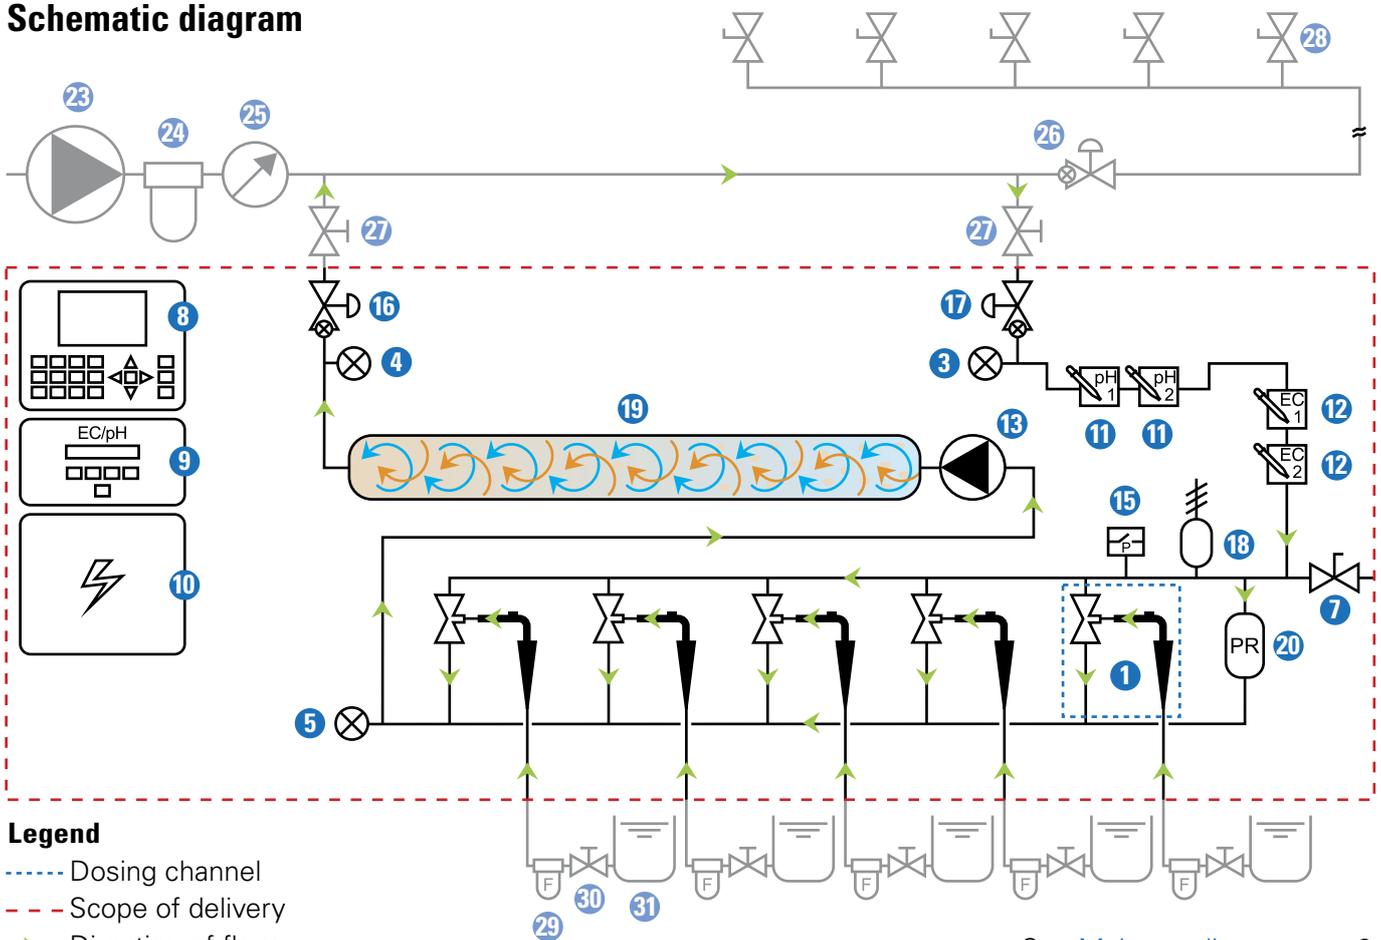

See [Main part list](#) on page 9

DESCRIPTION

BP ST mode

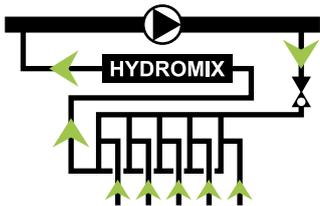

Bypass system for storage-tank water source.

Operating principle:

For systems operating at low pressure - from an on-ground reservoir or a storage tank [max. height: 6 meters (20 feet)].

The main line pump also serves as dosing booster pump.

Suitable for main line flow rate:

15-100 m³/h (66-440 GPM)

Flow limitation depends on the fertilizer injection rate and the size of the Venturis.

Suitable for main line pressure:

The water level in the storage tank should not be higher than 5 meters (16.4 feet) above the NetaJet™ 4G inlet.

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 5 x 50-600 l/hr (13-158 GPH)
- Optional - Concentrated acid channel, 50 l/h (13 GPH)

Total fertilizer/acid suction capacity - up to 3000 l/h (792 GPH).


Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.

Front view

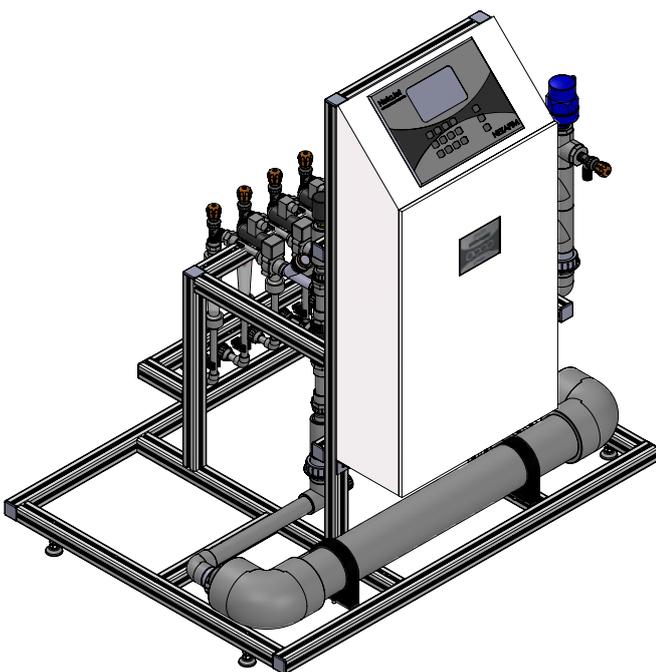


Back view

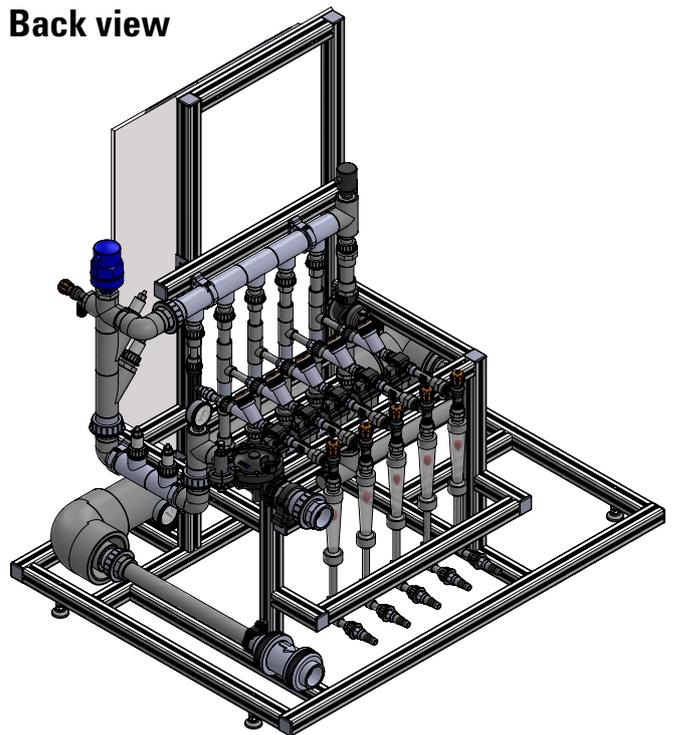


DESCRIPTION

BP ST mode - typical setup

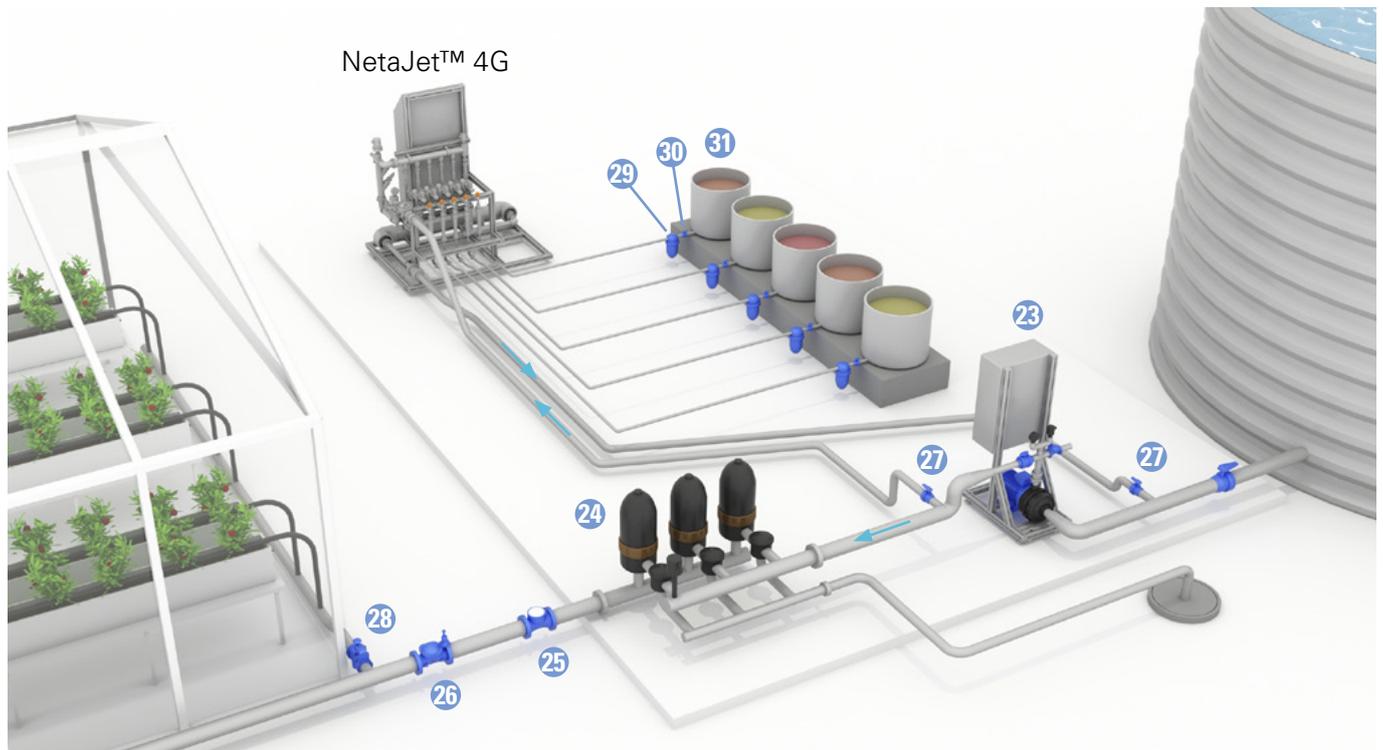

Schematic diagram

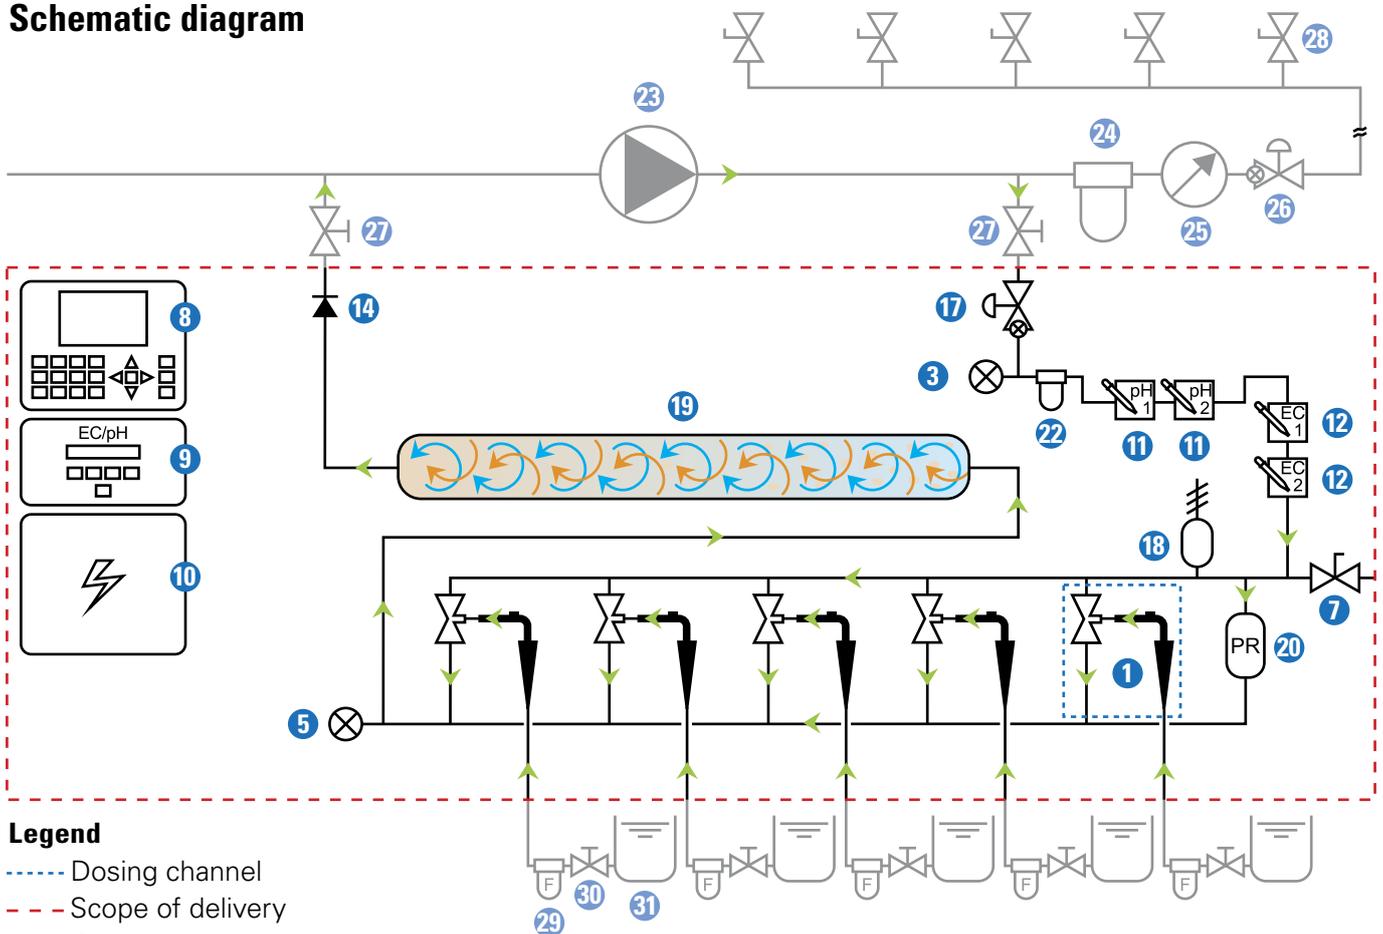


Legend

- - - Dosing channel
- - - Scope of delivery
- Direction of flow

See [Main part list](#) on page 9

DESCRIPTION

High-flow mode

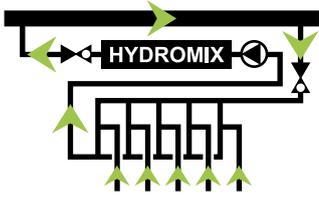

High-flow bypass system for pressurized-line water source

Operating principle:

The pressure differential required to generate fertilizer suction via the Venturis is produced by a booster pump integrated in the NetaJet™ 4G. This mode of operation, where the lower manifold is under low pressure (around 0 bar/PSI), permits the use of high-efficiency Venturis with high suction capacity and low motive flow consumption.

Suitable for main line flow rate:

80-400 m³/h (350-1760 GPM)

Flow limitation depends on the fertilizer injection rate and the size of the Venturis.

Suitable for main line pressure:

- Standard: 2.5-5.8 bar (36.5-84.0 PSI)
- High pressure: 5.8-7.5 bar (84.0-108.5 PSI)

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 5 x 50-1000 l/h (13-265 GPH)
- Optional - Concentrated acid channel, 50 l/h (13 GPH)

Total fertilizer/acid suction capacity - up to 5000 l/h (1320 GPH).


Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.

Front view

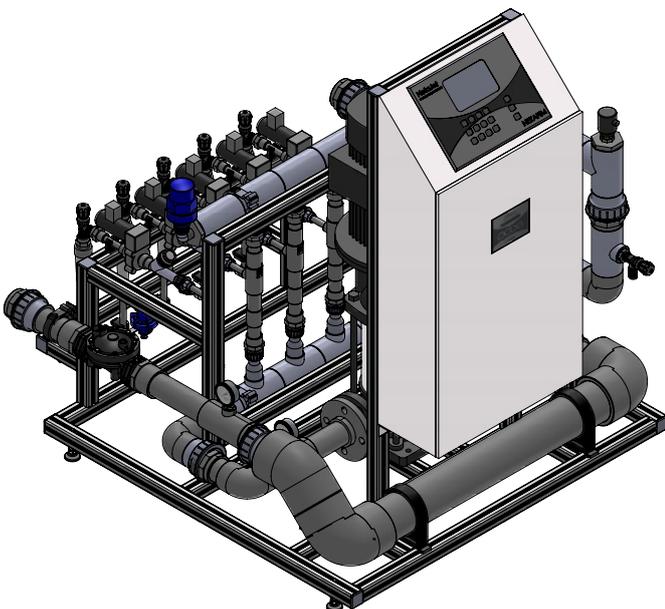


Back view

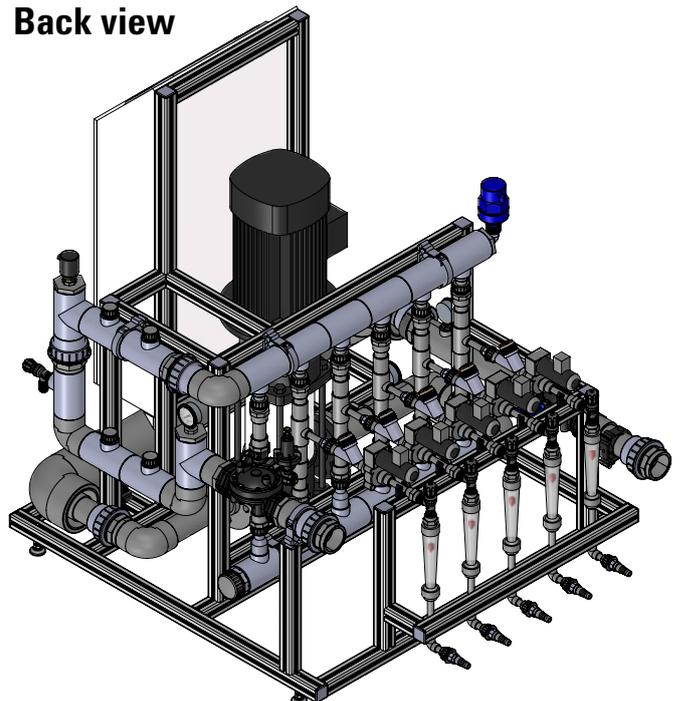


DESCRIPTION

High-flow mode - typical setup

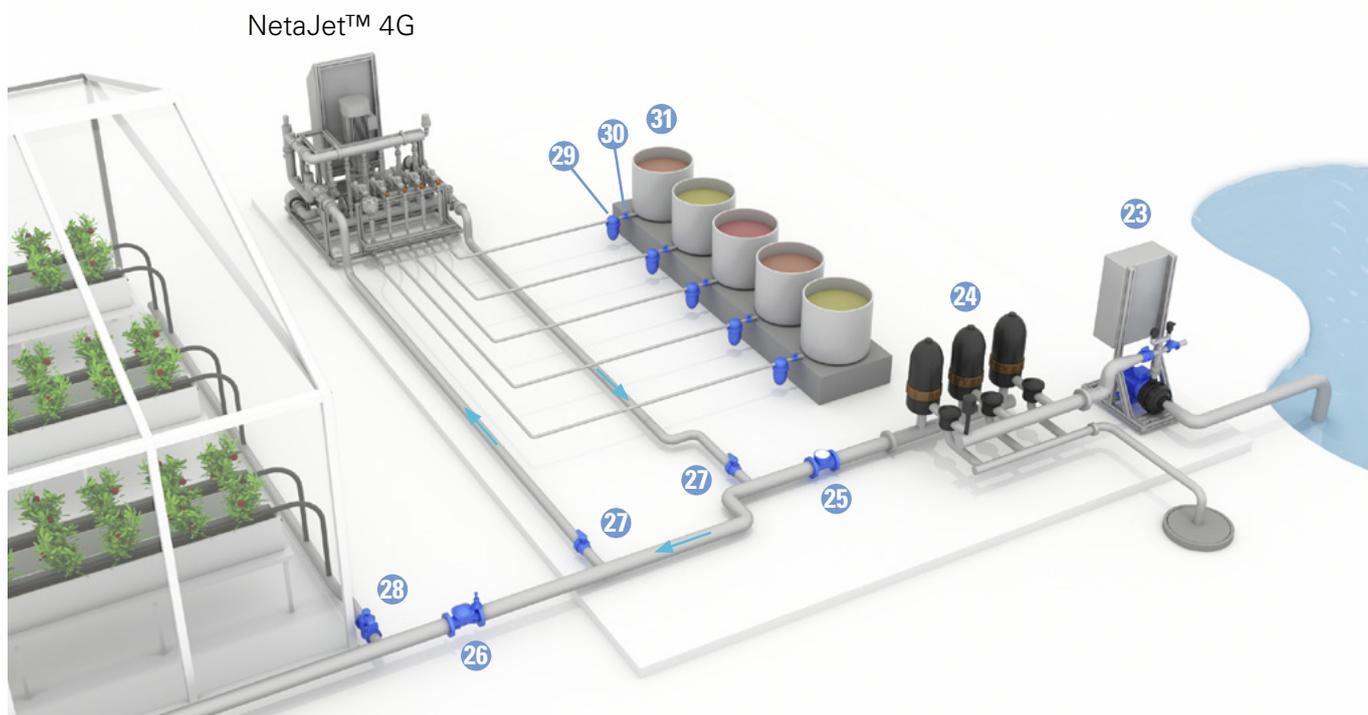

Schematic diagram

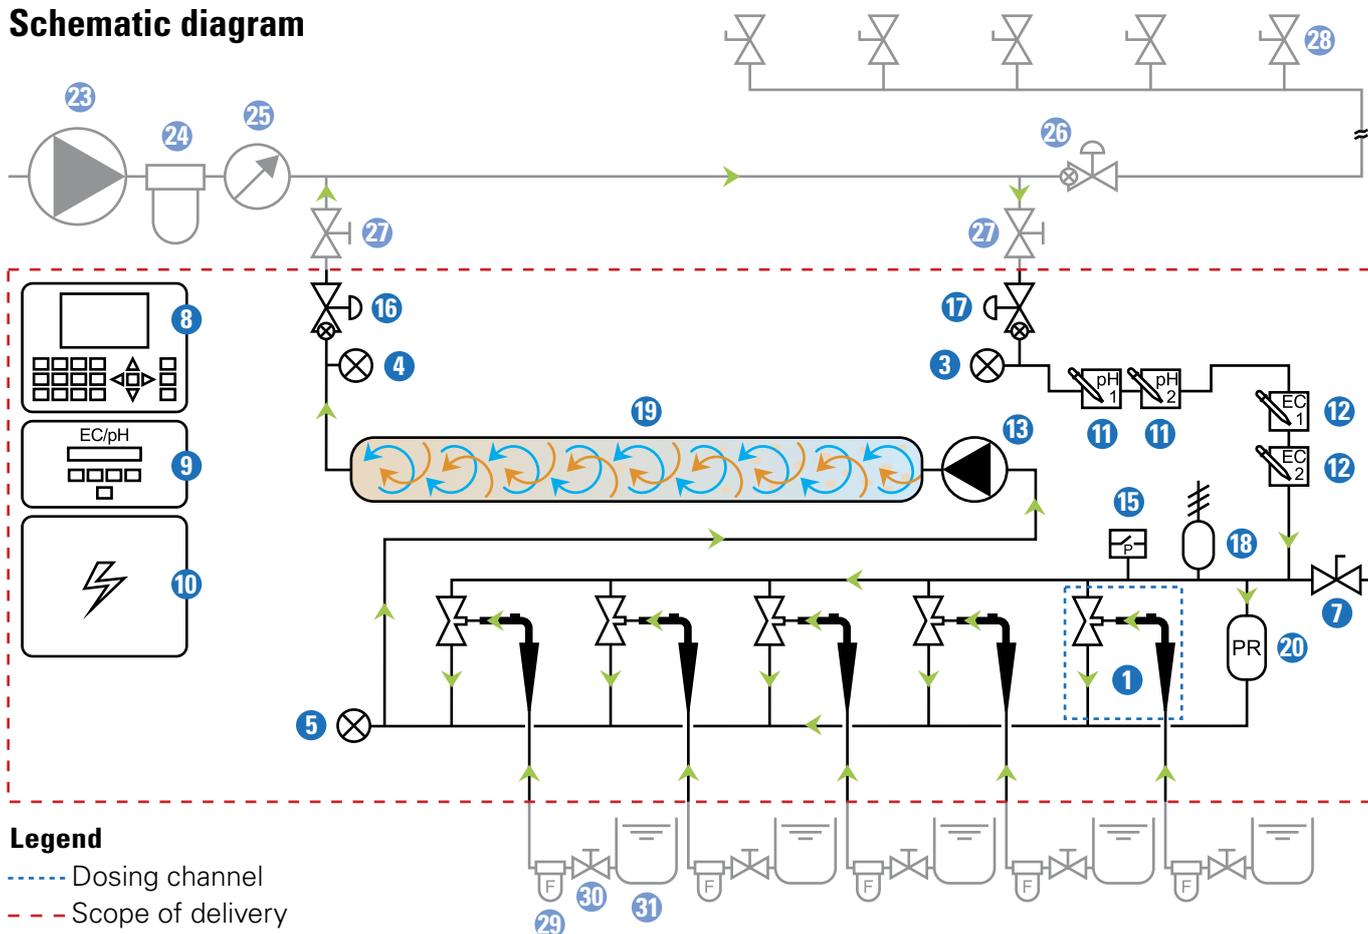


Legend

- - - Dosing channel
- - - Scope of delivery
- Direction of flow

See [Main part list](#) on page 9

DESCRIPTION

Octa - 8-channel mode

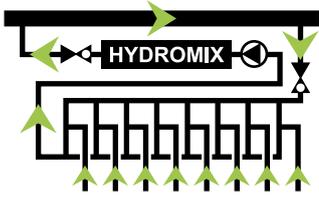

Bypass system for pressurized-line water source, with 8 dosing channels.

Operating principle:

The pressure differential required to generate fertilizer suction via the Venturis is produced by a booster pump integrated in the NetaJet™ 4G. This mode of operation, where the lower manifold is under low pressure (around 0 bar/PSI), permits the use of high-efficiency Venturis with high suction capacity and low motive flow consumption.

Suitable for main line flow rate:

20-120 m³/h (90-500 GPM). Flow limitation depends on the fertilizer injection rate and the size of the Venturis.

Suitable for main line pressure:

- Standard: 2.5-5.8 bar (36.5-84.0 PSI)
- High pressure: 5.8-7.5 bar (84.0-108.5 PSI)

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 8 x 50-600 l/h (13-158 GPH)
- Optional - Concentrated acid channel, 50 l/h (13 GPH)

Total fertilizer/acid suction capacity - up to 4800 l/h (1268 GPH).



CAUTION

The Octa mode (8 dosing channels) includes 3 dual dosing channels. There are fertilizer combinations that should **never** be used in any concentration in the dual dosing channel! (see [CAUTION](#), page 5)


Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.

Front view

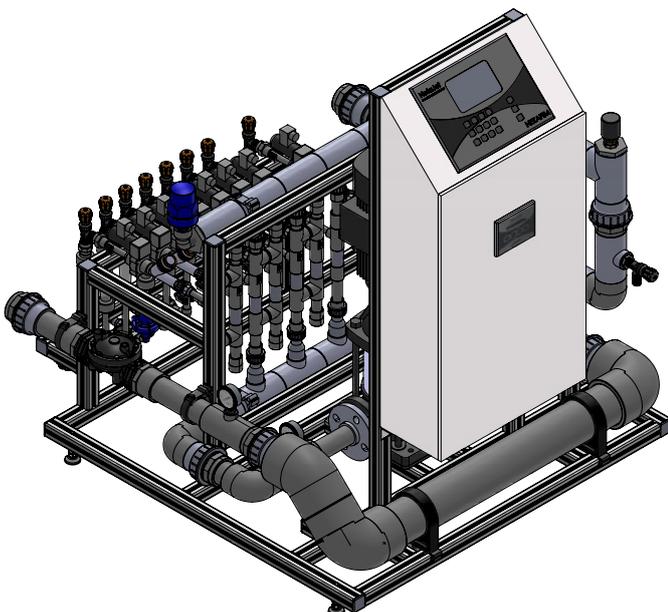


Back view

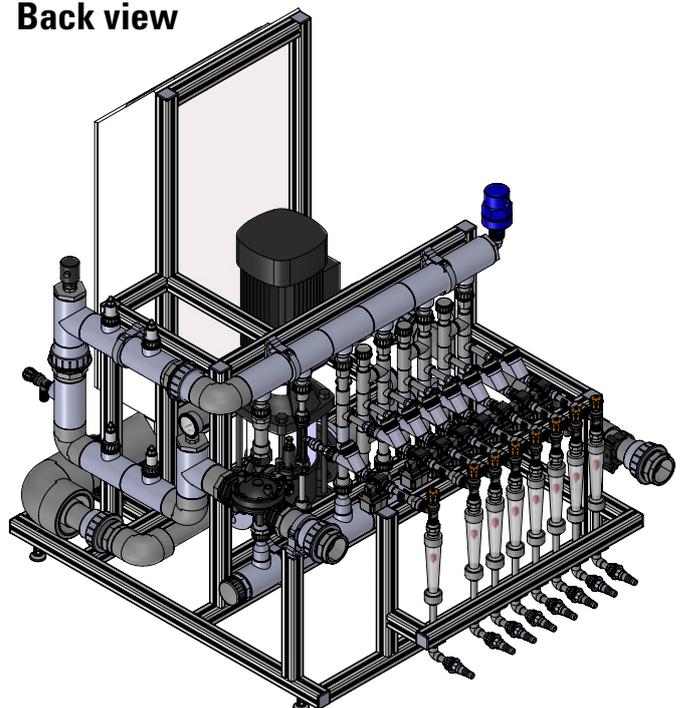


DESCRIPTION

Octa - 8-channel mode - typical setup

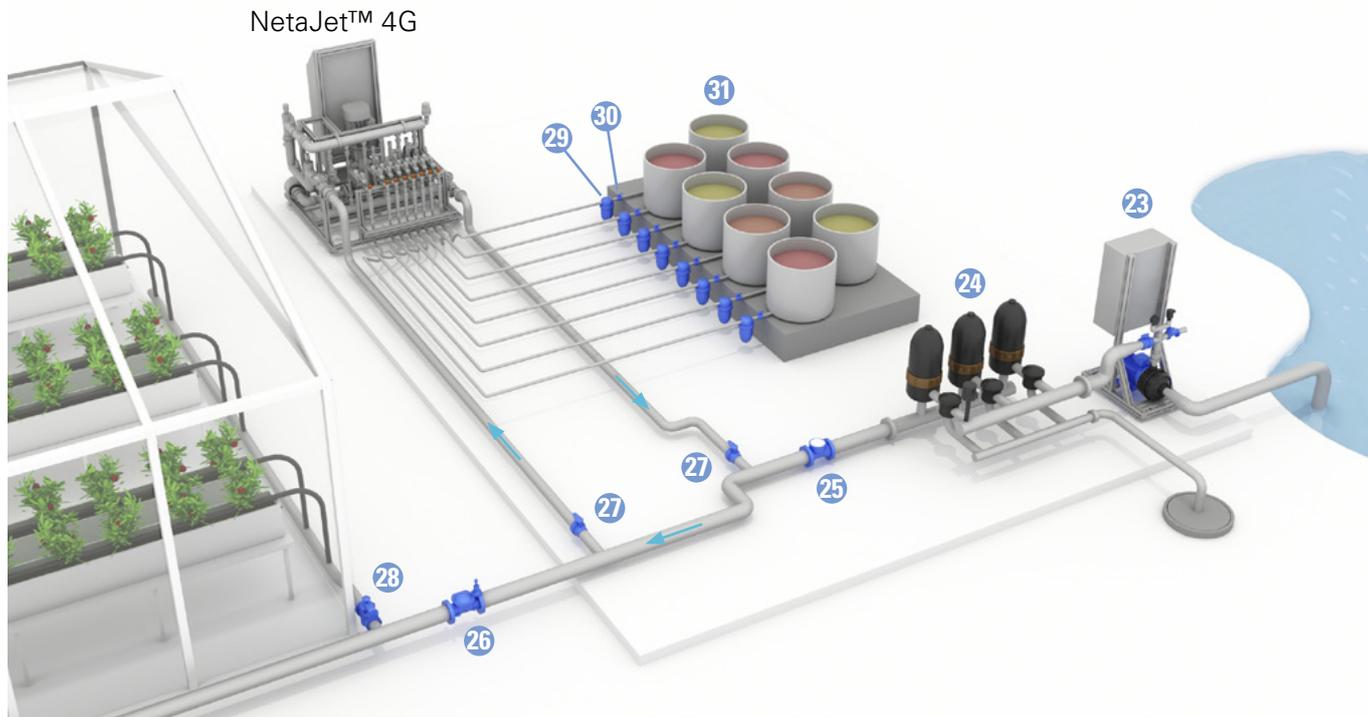

Schematic diagram

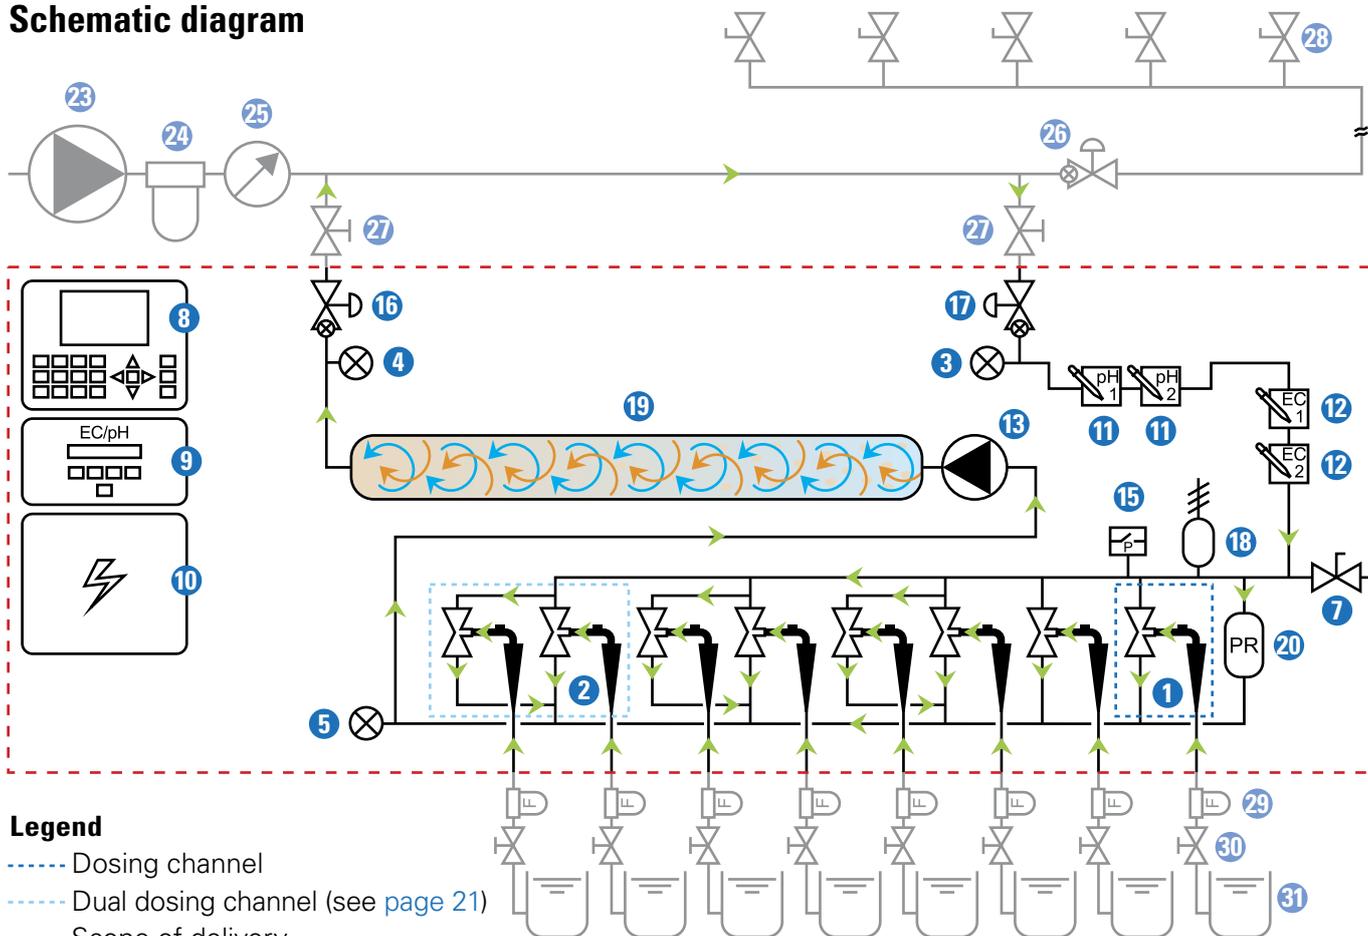


Legend

- - - - Dosing channel
- - - - Dual dosing channel (see page 21)
- - - - Scope of delivery
- Direction of flow

See [Main part list](#) on page 9

DESCRIPTION

IL PL mode

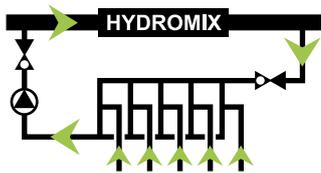

Inline system for pressurized line water source

Operating principle:

The pressure differential required to generate fertilizer suction via the Venturis is produced by a booster pump integrated in the NetaJet™ 4G. This mode of operation, where the lower manifold is at low pressure (around 0 bar/psi), allows the use of high-efficiency Venturis with high suction capacity and low motive flow consumption. Since all the main line water flows through the system, slight pressure losses at the NetaJet™ 4G outlet should be considered (see the table below).

Suitable for main line flow rate:

Up to 20 m³/h (90 GPM)

Suitable for main line pressure:

- Standard: 2.5-5.8 bar (36.5-84.0 PSI)
- High pressure: 5.8-7.5 bar (84.0-108.5 PSI)

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 5 x 50-400 l/hr (13-105.5 GPH)
- Optional - Concentrated acid channel, 50 l/h (13 GPH)

Total fertilizer/acid suction capacity - up to 2000 l/h (528 GPH).

Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.


Pressure losses

Flow rate m ³ /h (GPM)	Pressure loss bar (PSI)
5 (22)	0.3 (4.35)
10-20 (44-88)	0.4 (5.8)

Front view

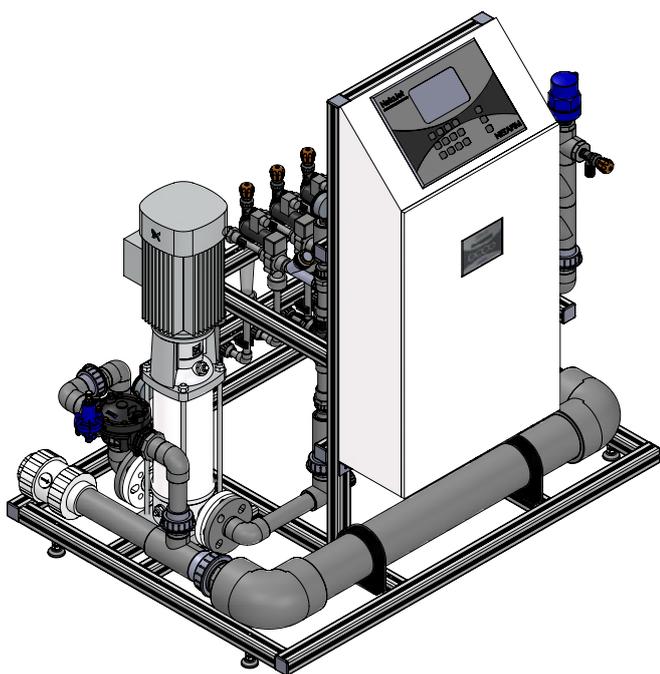


Back view

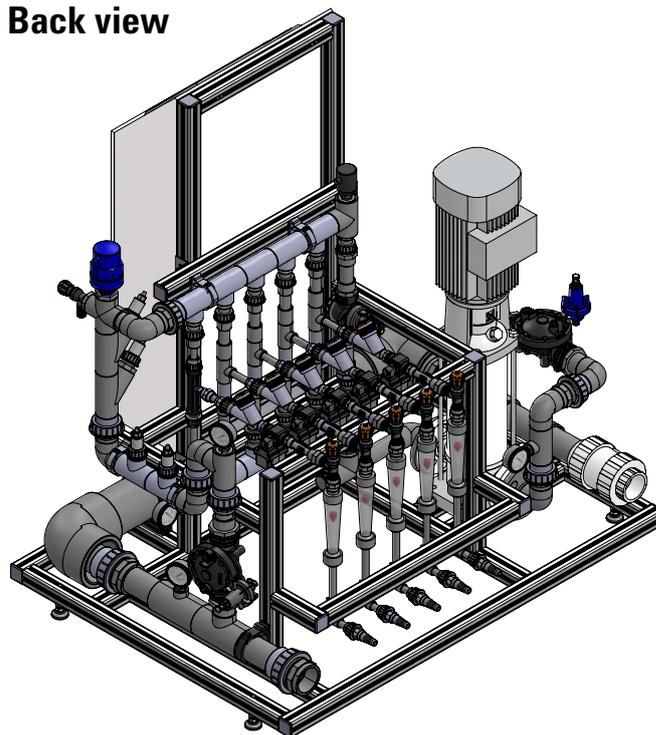


DESCRIPTION

IL PL mode - typical setup

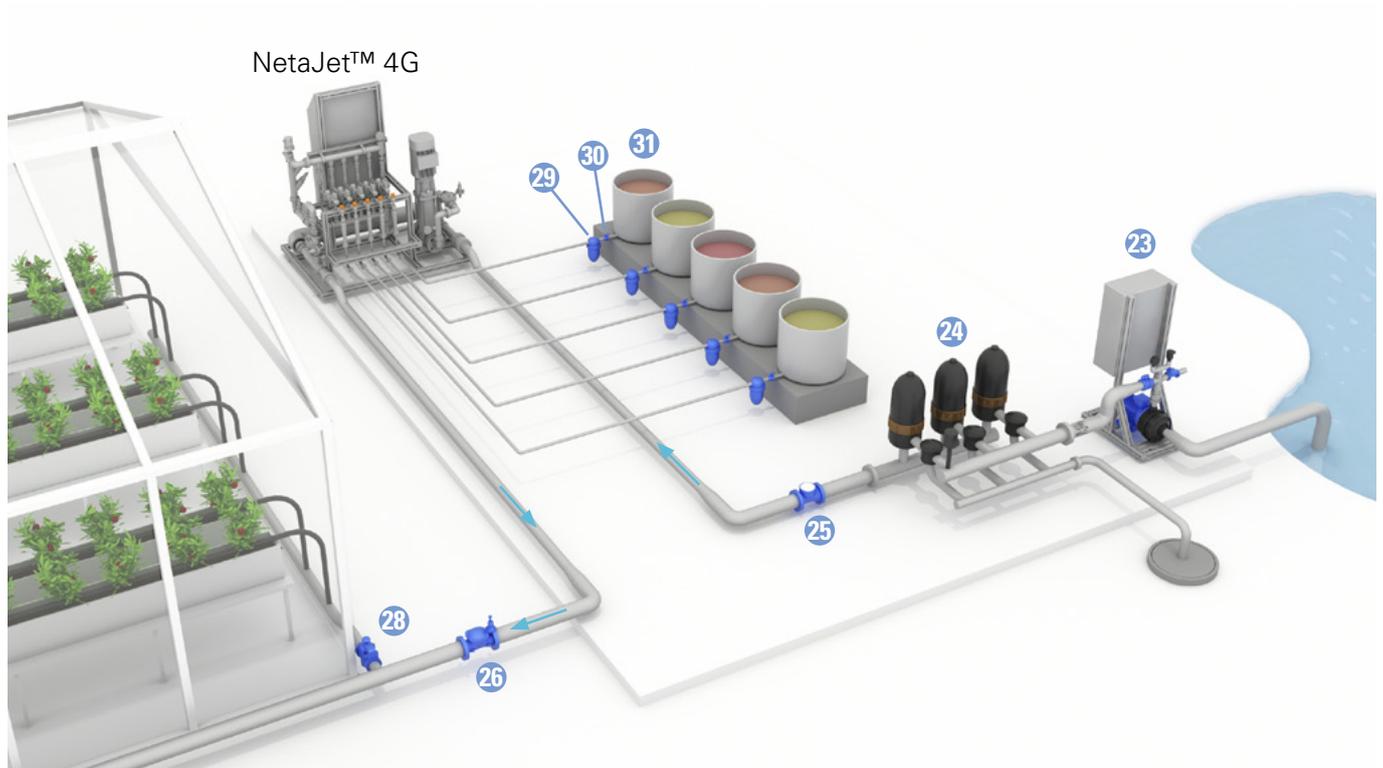

Schematic diagram

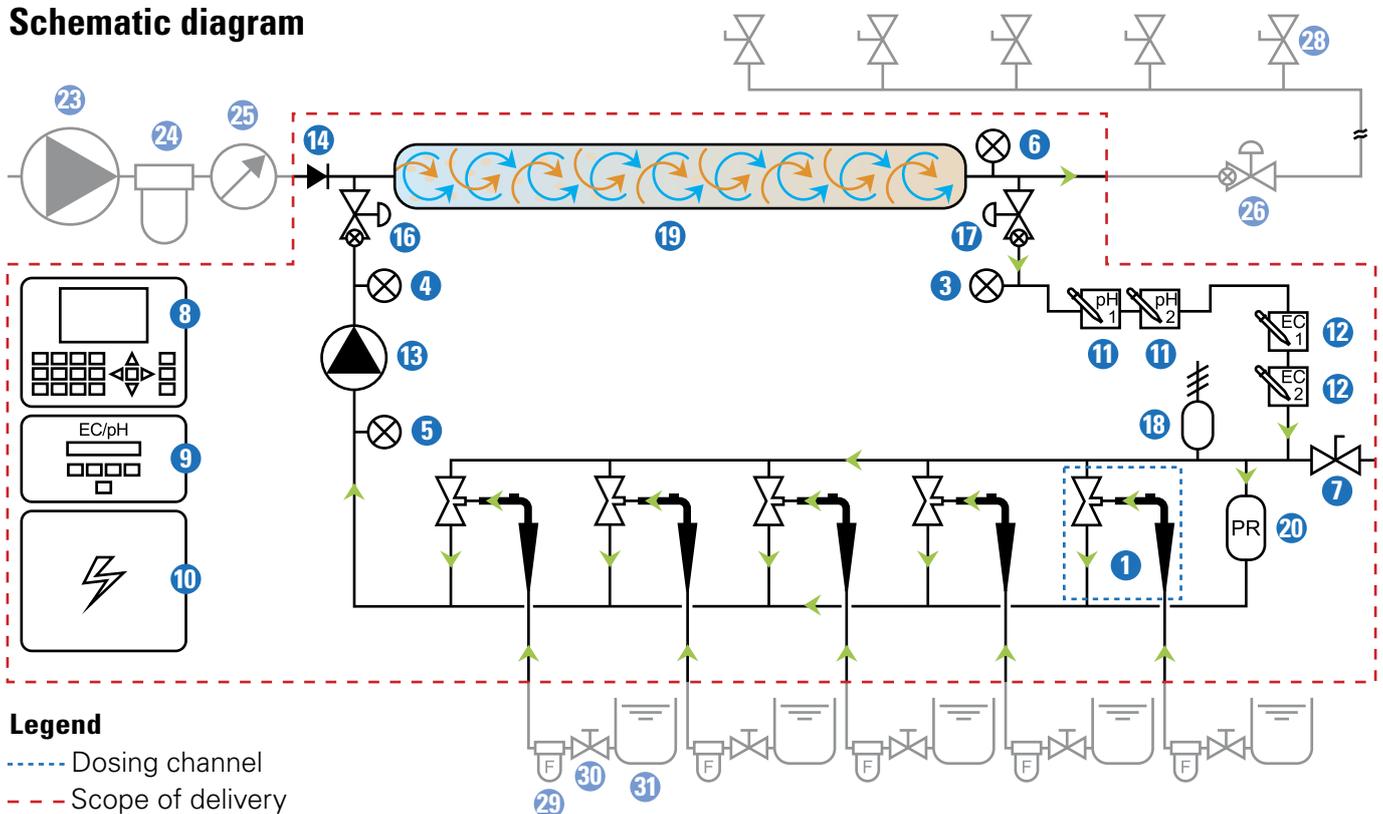


Legend

- - - Dosing channel
- - - Scope of delivery
- Direction of flow

See [Main part list](#) on page 9

DESCRIPTION

IL ST mode

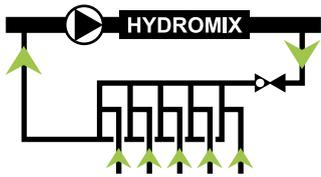

Inline system for storage-tank water source

Operating principle:

The pressure differential required to generate fertilizer suction via the Venturis is produced by a booster pump integrated in the NetaJet™ 4G. This mode of operation, where the lower manifold is at low pressure (around 0 bar/psi), allows the use of high-efficiency Venturis with high suction capacity and low motive flow consumption. Since all the main line water flows through the system, slight pressure losses at the NetaJet™ 4G outlet should be considered (see the table below).

Suitable for main line flow rate:

Up to 20 m³/h (90 GPM)

Suitable for main line pressure:

The water level in the storage tank should not be higher than 5 meters (16.4 feet) above the NetaJet™ 4G inlet.

Dosing channels:

Accommodates a wide variety of highly accurate dosing channels for fertilizer and concentrated/diluted acid:

- Up to 5 x 50-400 l/hr (13-105.5 GPH)
- Optional - Concentrated acid channel, 50 l/h (13 GPH)

Total fertilizer/acid suction capacity - up to 2000 l/h (528 GPH).

Controller:

NMC-Pro (Operation with third-party controllers is optional. Consult Netafim™.)


EC/pH:

Precise single or dual monitoring and control - selectable by customer.


Pressure losses

Flow rate m ³ /h (GPM)	Pressure loss bar (PSI)
5 (22)	0.8 (11.6)
10 (44)	0.9 (13.05)
15-20 (66-88)	1.0 (14.5)

Front view

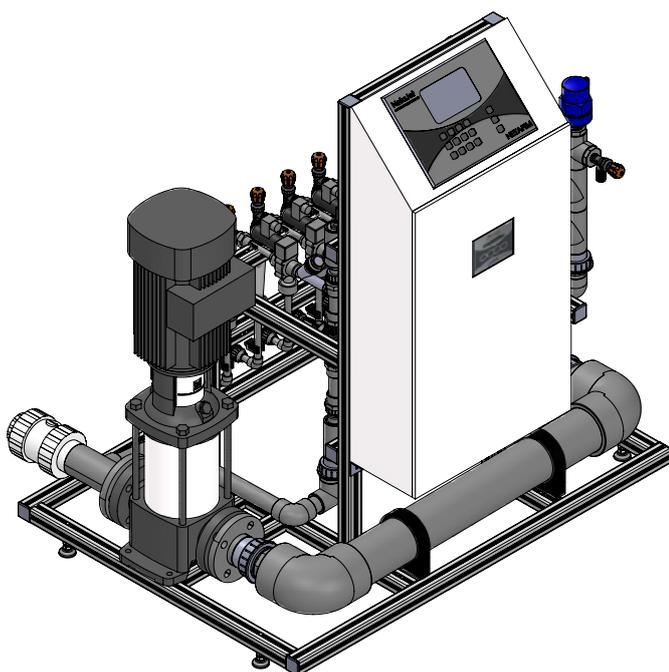


Back view

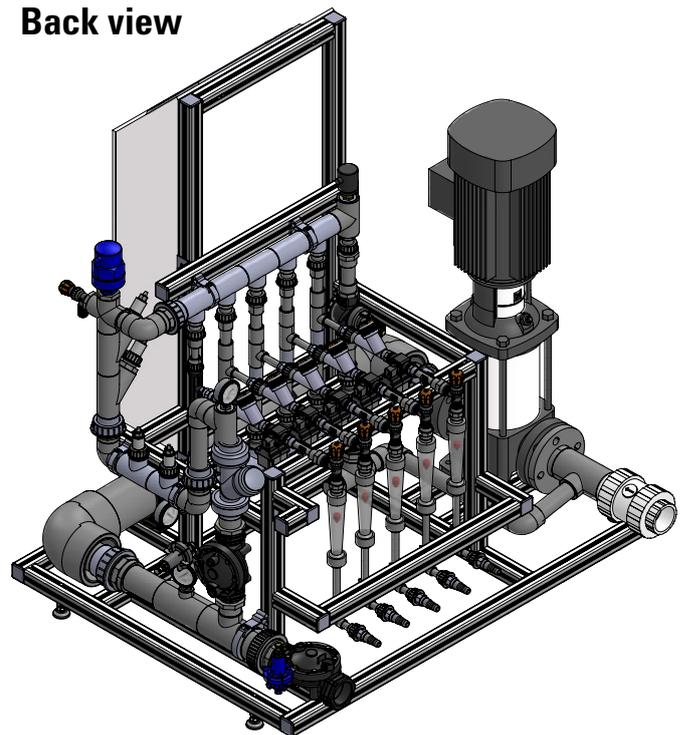


DESCRIPTION

IL ST mode - typical setup

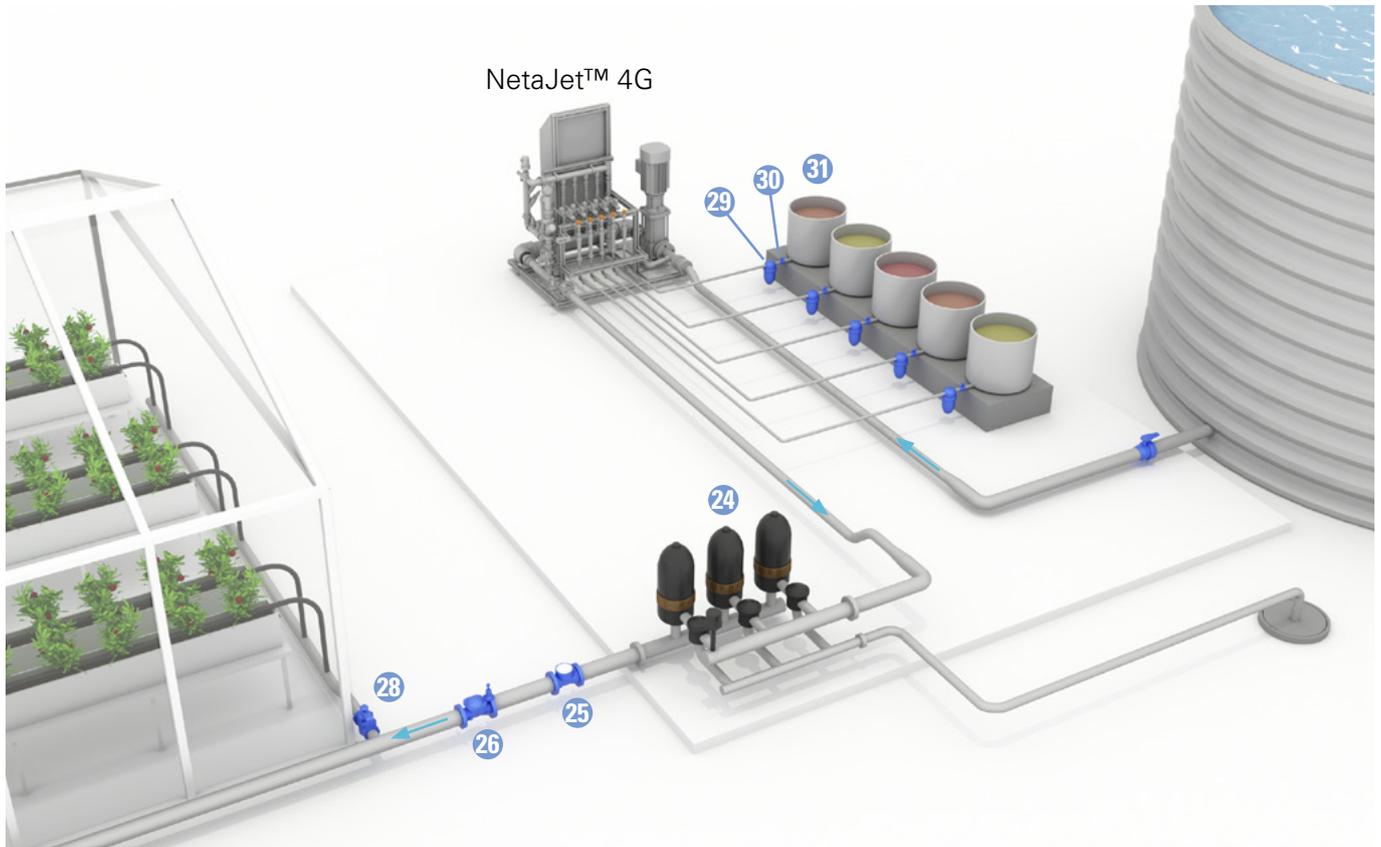

Schematic diagram

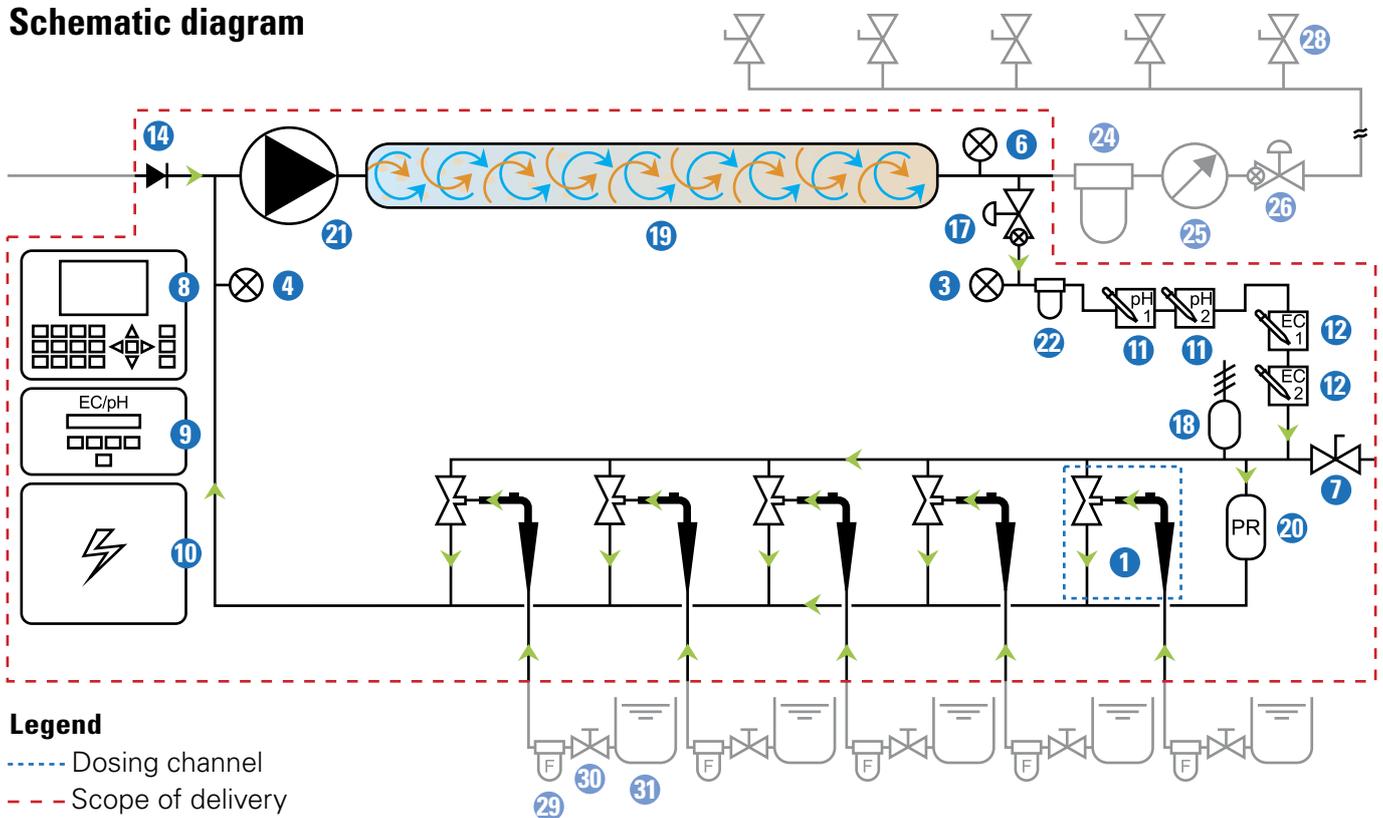

Legend

- - - Dosing channel
- - - Scope of delivery
- Direction of flow

See [Main part list](#) on page 9

OPERATION AND MAINTENANCE

Operation

The routine operation of the NetaJet™ 4G is almost totally automatic, controlled by the controller (for the operation of the controller, see the enclosed Controller Manual).

All you need is to make sure that:

- Electricity is supplied to the NetaJet™ 4G.
- Adequate quality water at the appropriate flow rate and pressure is supplied at the inlet of the NetaJet™ 4G (see the [NetaJet™ 4G Hydraulic Conditions Checklist](#), page 45).
- Fertilizers that are dissolved properly, according to the agronomist's instructions, are constantly present in the stock tanks.
- If acid is used - it is constantly present in the acid stock tank and does not exceed the recommended concentration (see [ATTENTION](#), page 5).

Dual dosing channel


The NetaJet™ 4G Octa mode (8 dosing channels) includes 3 dual dosing channels.

The dual dosing channels are applicable with 50 l/h (13 GPH) and 600 l/h (158 GPH) Venturis.



CAUTION

There are fertilizer combinations that should **never** be used in any concentration in the dual dosing channel! (see [CAUTION](#), page 5)

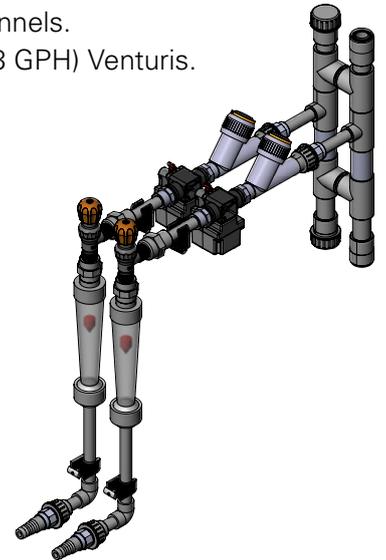

OPERATION AND MAINTENANCE

Maintenance



CAUTION

When opening or closing any manual valve, always do so gradually, to prevent damage to the system by water hammer.

To prevent failures and extend the life cycle of the NetaJet™ 4G, the user must carry out regular maintenance.

- Keep the NetaJet™ 4G dosing unit and its immediate environment clean and dry.



CAUTION

Before calibrating the EC and pH sensors, gradually close the isolation valves and open the sampling outlet until the pressure in the system is released.

- The NetaJet™ 4G dosing unit and the supply water and irrigation system must be inspected regularly.

Regular inspection

Description	How often	Instructions
Rinsing of fertilizer filters*	Once a day	
Rinsing of supply water filters*	Once a day	
Water and fertilizer leak inspection	Once a week	Visual inspection
Calibration of the pH sensor	Every 2-4 weeks	See the EC/pH Transducer Manual
Calibration of the EC sensor	Every 4 weeks	

* Manual filters only.

Check the NetaJet™ 4G hydraulic conditions every 4 weeks

Check the main line flow meter and pressure gauge, the upper manifold and lower manifold pressure gauges and the Rotameters of the dosing channels, fill in the data on the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45) provided by the installer and make sure that all the hydraulic conditions match the reference data.

When verifying the flow rate for each dosing channel, make sure the cursors on all the Rotameters are adjusted.




NOTE

The Rotameter's scale is calibrated by the manufacturer for measurement of the flow rate of water (H₂O). Certain inaccuracies may be observed when measuring the flow rates of liquids with different densities, such as fertilizers and acids.



ATTENTION

Once a month, read the measured flow rates of the dosing channels and compare them with the flow rates defined in the controller, to check whether any changes have occurred.

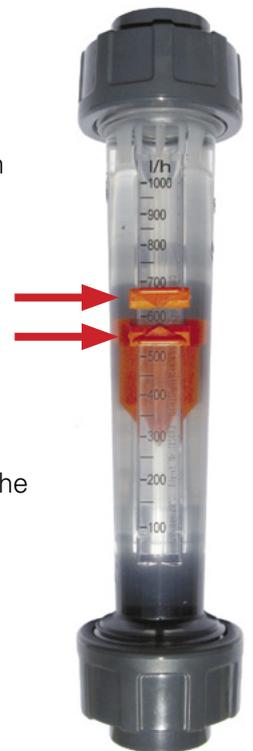

OPERATION AND MAINTENANCE

Winterization



CAUTION

When opening or closing any manual valve, always do so gradually, to prevent damage to the system by water hammer.

In areas susceptible to freezing temperatures, if the system is not required for irrigation during the winter, perform the following procedure to avoid damage caused by freezing when the NetaJet™ 4G is idle for the winter period:

At the beginning of winter:

- Gradually close the isolation valves and open the sampling valve until the pressure in the system is released.
- Remove EC and pH sensors and store the pH sensor immersed in KCL solution (supplied with the sensor) or in calibration buffer 4 at a temperature of 18-25°C (64-77°F). The pH sensor must never be dry (see the enclosed EC/pH Transducer Manual).
- Empty the NetaJet™ 4G of water.

At the end of winter:

- Reinstall the EC and pH sensors and calibrate them (see the enclosed EC/pH Transducer Manual).
- Gradually open the isolation valves until the pressure in the system is restored.

TROUBLESHOOTING

This chapter is a systematic guide to the actions to be taken in the case of a malfunction of the NetaJet™ 4G.



ATTENTION

Before proceeding to troubleshoot any malfunction, make sure that:

- The controller settings regarding the dosing channels are correct and match the dosing channels of the NetaJet™ 4G (see the enclosed Controller Manual).
- The controller settings regarding the irrigation valves are correct (see the enclosed Controller Manual).

Perform the actions in their order of appearance until the malfunction is fixed.

If you identify faulty parts - consult your Netafim™ representative.



CAUTION

Only qualified electricians are permitted to perform electrical installations and repairs!



CAUTION

If isolation valves have been installed on the system, ensure that they are in closed position before troubleshooting any hydraulic malfunction.



ATTENTION

If fertilizers from a different manufacturer have been recently in use and changes in EC and pH are recorded, perform calibration of the system before assuming a malfunction of the NetaJet™ 4G (see [Dosing calibration](#), page 30).

Symptoms regarding more than one single dosing channel

If one or more of the following symptoms occur regarding more than one single dosing channel, perform the actions listed below:

Controller warnings

- Low EC
- High pH
- Low fertilizer/acid flow rate

Rotameter reading

- Low fertilizer/acid flow rate

Action

- 1) For controller warnings only - check and calibrate the EC and pH sensors (see the enclosed EC/pH Transducer Manual).
- 2) Have a qualified electrician check that electricity is being supplied to the NetaJet™ 4G and that all the electrical components are properly connected (see the enclosed Switchboard Diagram).
- 3) Check that the hydraulic conditions comply with the reference data in the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45).

If NO, restore the original hydraulic conditions according to the reference data in the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45).

If YES or if the malfunction is still not fixed after restoring the original hydraulic conditions, in modes with a dosing booster - have a qualified electrician check the dosing booster:

Does it function? Does it rotate in the correct direction?


If not - the electrician should swap between phases L1 and L3 (see the enclosed Dosing Booster Manual).

TROUBLESHOOTING


- 4) Check for an air pocket in the dosing booster impeller chamber (see the enclosed Dosing Booster Manual): Open the NetaJet™ 4G sampling outlet until a stable flow, free of air-bubbles, is obtained.
- 5) If the original hydraulic conditions are still not restored - loosen the dosing booster's bleeding screw and wait until a stable flow, free of air-bubbles, is obtained, then retighten the bleeding screw (see the enclosed Dosing Booster Manual).
- 6) Check the dosing booster's impeller chamber for clogging:
If it is clogged - it should be dismantled and thoroughly cleaned (see the enclosed Dosing Booster Manual).

If after implementing all the above steps the malfunction is still not fixed - consult your Netafim™ representative.

Symptoms regarding a single dosing channel

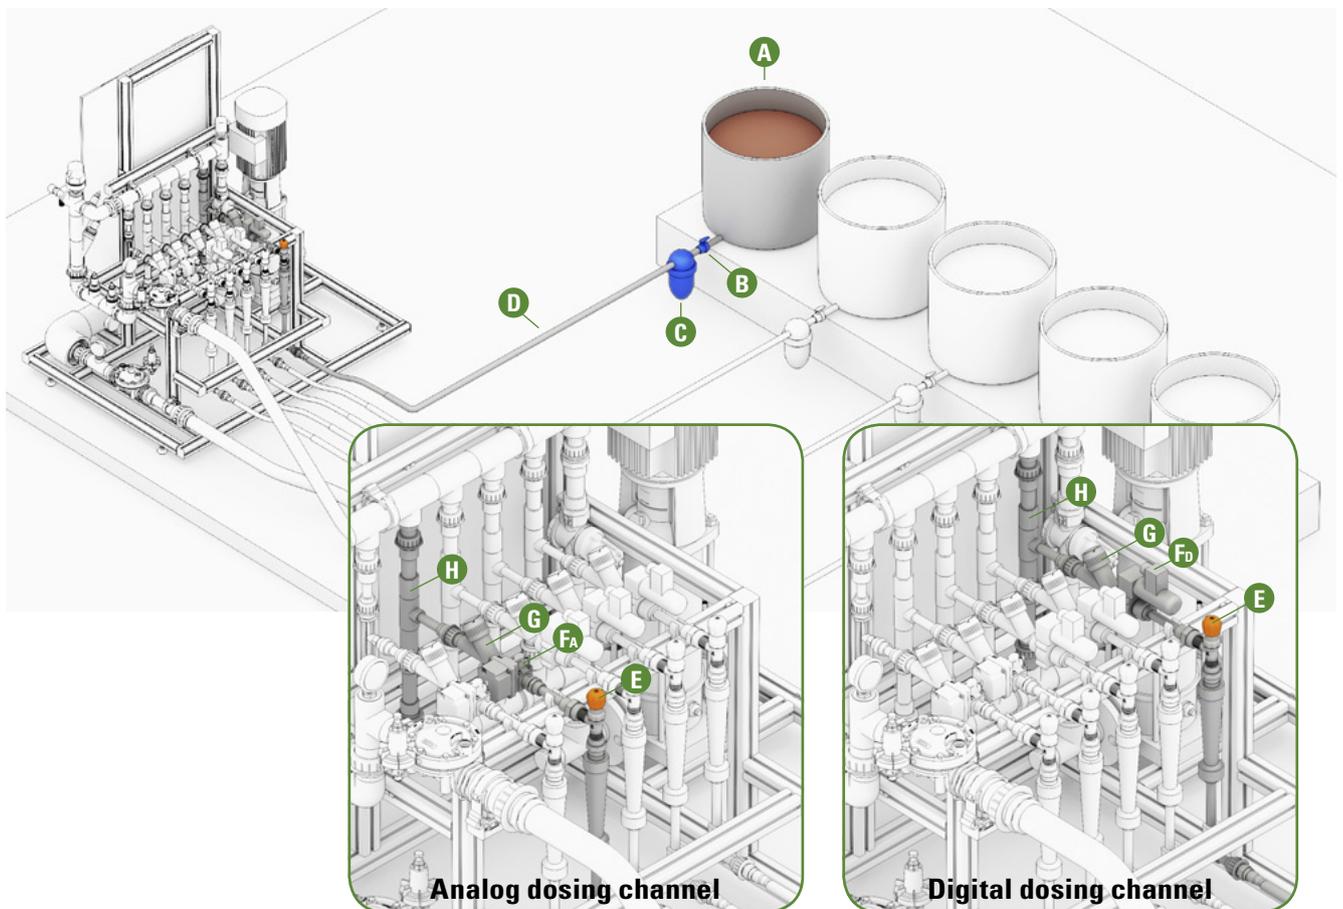

Analog dosing valve

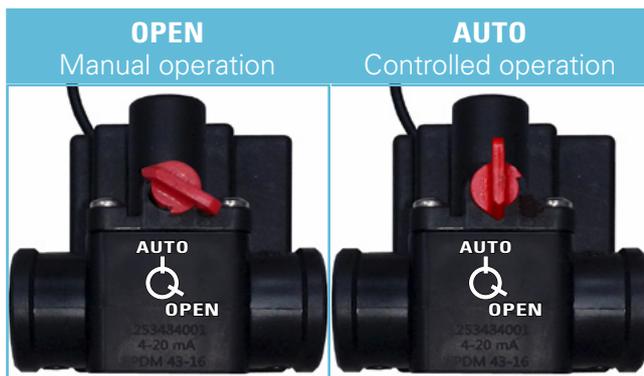

Digital dosing valve



TROUBLESHOOTING

If one or more of the following symptoms occur regarding a single dosing channel, perform the actions listed below:

Controller warnings

- Low EC
- High pH
- Low fertilizer/acid flow rate

Rotameter reading

- Low fertilizer/acid flow rate

Action

- 1) Check that there is fertilizer/acid solution in the stock tank **A**.
- 2) Check that the stock tank manual valve **B** is in the OPEN position.
- 3) Check that the fertilizer/acid filter **C** is clean - If not, it should be dismantled and thoroughly cleaned.
- 4) Check the fertilizer/acid line **D** (from the stock tank to the dosing channel) for leaks and breaches and make sure all the connectors are tightened.
- 5) Make sure the dosing channel's needle valve **E** is open according to the reference data in the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45).
- 6) Visually check the needle valve **E** for chemical damage (internal deformation).
If internal deformation is present - replace the needle valve.
- 7) Visually check the needle valve **E** for clogging.
If clogging is present - thoroughly clean the needle valve.
- 8) Check that the dosing valve is functioning:

Analog dosing channel

Set the dosing valve **F_A** to OPEN. Suction should be visible in the Rotameter.

If there is no suction - disconnect the dosing valve and check it for clogging.

If there is clogging - thoroughly clean the dosing valve **F_A** with running water.

If there is no clogging or if there is still no suction after cleaning the dosing valve - replace it.

If after replacing the dosing valve there is still no suction - check the controller (see the enclosed Controller Manual)

Digital dosing channel

With the controller in MANUAL mode, set the dosing valve **F_D** to OPEN.
(see the enclosed Controller Manual)

The LED on the dosing valve should be lit.

If it is not - have a qualified electrician check the dosing valve's cable for electrical continuity.

If the cable is in working order - check the controller (see the enclosed Controller Manual).

If the controller and the cable are in working order - toggle the dosing valve **F_D** to OFF and again to ON in the controller (see the enclosed Controller Manual). A "click" should be heard from the dosing valve with each toggle - if a "click" is not heard, replace the dosing valve (consult your Netafim™ representative).

If a "click" is heard and the dosing valve **F_D** still does not open - disconnect the dosing valve from the dosing channel and with the dosing valve set to ON in the controller (see the enclosed Controller Manual), check for clogging by injecting water at low pressure through the dosing valve.

If there is clogging - thoroughly clean the dosing valve **F_D** with running water.

TROUBLESHOOTING

If there is no clogging but the dosing valve **F_n** still does not open - replace it (consult your Netafim™ representative).

9) Visually check the non-return valve **G** for any internal deformation or damage to its flat ring gasket. If present - replace the non-return valve (consult your Netafim™ representative).

10) Check the non-return valve **G** for clogging by injecting water at low pressure through it (make sure to respect the direction of flow).

If there is clogging - thoroughly clean the non-return valve **G** with running water.

11) Disconnect the Venturi **H** from the manifolds and from the dosing channel and check it for clogging, visually and by injecting water through it at low pressure.

If there is clogging - thoroughly clean the Venturi **H** with running water.

12) Visually check the Venturi **H** for chemical damage (internal deformation).

If internal deformation is present - replace the Venturi (consult your Netafim™ representative).

If after implementing all the above steps the malfunction is still not fixed - consult your Netafim™ representative.

Symptoms while idle

If the following symptoms occur while the NetaJet™ 4G is idle, perform the actions listed below:

Controller warnings

- High EC
- Low pH
- While idle - Uncontrolled fertilizer/acid flow rate or a fertilizer/acid leak or breach

Action



NOTE

- When using an analog dosing valve, make sure the dosing valve selector is in the AUTO position.
- When using a digital dosing valve (S22), make sure the dosing valve selector is in the CLOSED position.

Check if the dosing valves leak when closed:

- 1) Close all the manual valves **B** for fertilizers and acid.
- 2) Make sure the level of the solution in all the the stock tanks is higher than the dosing valves.
- 3) With the controller in MANUAL mode, set all the dosing valves to OFF (see the enclosed Controller Manual).
- 4) Disconnect one of the the dosing valves from the non-return valve (downstream from the dosing valve).

5) Open the fertilizer manual valve **B**.

If a leak from the dosing valve is visible - disconnect the dosing valve from the dosing channel.

6) With the controller in MANUAL mode, set the dosing valve to ON (see the enclosed Controller Manual).

7) Thoroughly clean the dosing valve with running water.

8) Repeat steps 4-7 for each fertilizer and acid dosing channel.

TROUBLESHOOTING

- 9) After completing the procedure, open all the manual valves **B** for fertilizers and acids.
- 10) If the malfunction is still not fixed - replace the dosing valve.

If after implementing all the above steps the malfunction is still not fixed - consult your Netafim™ representative.

The NetaJet™ 4G does not function at all



CAUTION

Only qualified electricians are permitted to perform electrical installations and repairs!

If the following symptom occurs, perform the actions listed below:

Symptom

The NetaJet™ 4G does not function.


Action

- 1) Have a qualified electrician check the overload protection breaker (see the enclosed Switchboard Diagram):

If it is not in the ON position, turn it to ON.

If it is in the ON position, toggle it once to OFF and to ON again (**do not repeat this action**).

If the overload protection breaker trips (turns to OFF or to TRIP) again, the electrician will check whether the system pump is in working order (see the system pump manual) and check for irregularities in the electricity voltage supplied to the NetaJet™ 4G.

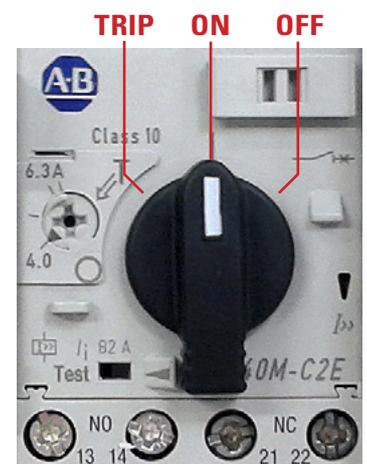

If after implementing all the above steps the malfunction is still not fixed - consult your Netafim™ representative.

System vibrations

If the following symptom occurs during operation, perform the action listed below:

Symptom

The NetaJet™ 4G vibrates during operation.

Cause

The main line pressure is out of the NetaJet™ 4G working range (higher or lower).

Action

- 1) Restore the main line pressure to the original value according to the reference data in the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45).

If the main line pressure is restored and the vibrations persist - consult your Netafim™ representative.

- 2) If it is impossible to restore the main line pressure according to the reference data - alter the system calibration according to the actual main line pressure - consult your Netafim™ representative.

DOSING CALIBRATION

The process of calibrating the NetaJet™ 4G dosing channels is carried out in three stages:

1. Calculation of dosing channel opening percentage

To finely calibrate the NetaJet™ 4G dosing channels in order to achieve homogeneous and stable dosing, perform the following calculation for each dosing channel (fertilizers and acids) to determine the amount of suction reduction needed to attain the required fertilizer/acid flow rate.

Metric units

Flow rate of the largest irrigation shift m³/hr
 X
 Dosing ratio of a single fertilizer/acid l/m³
 =
 Result: a single fertilizer/acid flow rate l/hr
 X 1.25 =
 Result: target Rotameter reading l/hr

EXAMPLE

m³/hr
 X
 l/m³
 =
 l/hr
 X 1.25 =
 l/hr

DEFINITION

Dosing ratio = $\frac{\text{The quantity of fertilizer/acid (l)}}{1 \text{ m}^3 \text{ irrigation water}}$

US units

Flow rate of the largest irrigation shift GPM
 X
 Dosing ratio of a single fertilizer/acid US gal/1000 US gal
 X 0.06 =
 Result: a single fertilizer/acid flow rate GPH
 X 1.25 =
 Result: target Rotameter reading GPH

EXAMPLE

GPM
 X
 US gal/1000 US gal
 X 0.06 =
 GPH
 X 1.25 =
 GPH

DEFINITION

Dosing ratio = $\frac{\text{The quantity of fertilizer/acid (US gal)}}{1 \text{ THG (1000 US gal) irrigation water}}$



NOTE

The Rotameter's scale is calibrated by the manufacturer for measurement of the flow rate of water (H₂O). Certain inaccuracies may be observed when measuring the flow rates of liquids with different densities, such as fertilizers and acids.

2. Simulation test with a 10-liter (2-US-gallon) bucket of water

Instruments needed

- Good-quality portable EC and pH sensors, finely calibrated
- Calibration solutions for EC and pH
- Bucket with a scale for up to 10 liters (2 US gallons)
- Measuring tube or syringe with a scale for up to 100 cc (1 oz)
- Clean (preferably distilled) water for cleaning sensors during calibration
- Blotting paper for cleaning and drying

The client prepares the fertilizer solutions and the acid solution (if required) in the stock tanks according to the recipe advised by the agronomist/consultant.



ATTENTION

Ensure that the fertilizers and acid solutions in the stock tanks have been thoroughly agitated before starting the simulation.

DOSING CALIBRATION

Note the required dosing ratio of each fertilizer solution and the dosing ratio of the acid solution (if used).

Fill a bucket with 10 liters (2 US gallons) of the client's supply water (without fertilizer or acid).

Measure the EC and the pH levels of the water in the bucket using calibrated portable sensors.

EXAMPLE

	EC	pH
Supply water (without fertilizer or acid)	0.3	7.8

Using a measuring tube or a syringe, take a dose from each fertilizer solution and from the acid solution (if used) according to the proportions determined by the dosing ratio (see example below) and **mix thoroughly** with the water in the bucket.

EXAMPLE

Metric units

For a fertilizer dosing ratio of 5 l/m³ each and an acid dosing ratio of 2 l/m³, the quantities for 10 liters of water in the bucket-simulation test will be 50 cc of each fertilizer solution and 20 cc of the acid solution

US units


For a fertilizer dosing ratio of 1.5 US gal/THG each and an acid dosing ratio of 1.1 US gal/THG, the quantities for 2 US gallons of water in the bucket-simulation test will be 0.38 oz* of each fertilizer solution and 0.28 oz** of the acid solution

DEFINITIONS

1 US gal = 128 oz

$$* \frac{1.5 \times 2}{1000} = 0.003 \text{ US gal} = 0.384 \text{ oz}$$

$$** \frac{1.1 \times 2}{1000} = 0.0022 \text{ US gal} = 0.28 \text{ oz}$$

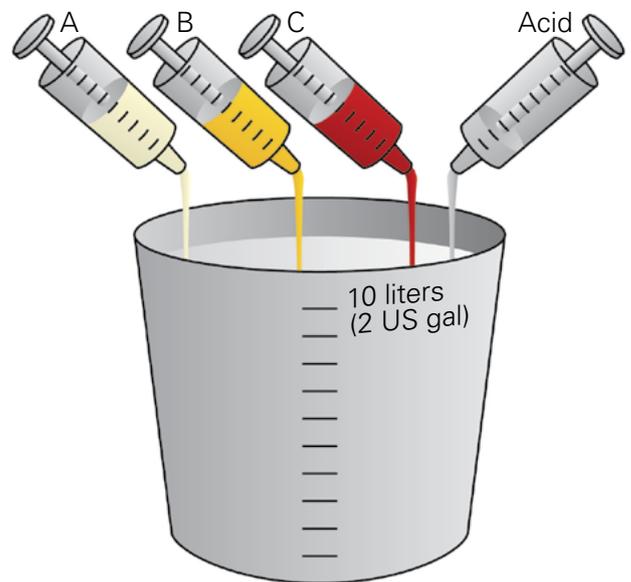

Measure the EC and the pH levels of the mixture in the bucket using calibrated portable sensors.

Compare the measured EC and pH values to the target values set by the agronomist/consultant.

EXAMPLE

	EC	pH
After adding the fertilizers and acid	1.6	5.5
Target values	1.8	5.8
Deviation from target value	11%	5%



DOSING CALIBRATION

With the controller set to operate according to EC/pH values - if the EC and pH values measured in the bucket are within a range of $\pm 30\%$ deviation from the target values, the system will be able to correct them automatically.

If the values are out of the $\pm 30\%$ range, check the data and consult the agronomist/consultant.

3. Calibration of the NetaJet™ 4G while irrigating



WARNING

Extreme EC or pH values may damage the crop.

Perform the following procedure only after completing stage 2 above ([Simulation test with a 10-liter or 2-US-gallon bucket of water](#)) with satisfactory results.



NOTE

The following steps explain the operations to be performed, regardless of the type of controller used. For the operation of your controller's interface, consult the enclosed Controller Manual.

However, since the NMC Pro controller is widely used - its interface screens for the execution of each step are noted.



NOTE

Before the calibration, confirm that the EC and the pH sensors of the NetaJet™ 4G have been calibrated according to the instructions in the enclosed EC/pH Installation Manual.

Define the dosing configuration, while the EC and pH controls are in the OFF position (**NMC Pro - screen 7.7**).

In the EC and pH alarm definitions, set the EC and pH alarm to the OFF position (deactivated) (**NMC Pro - screen 3.6**).

Enter the data for the irrigation valves, and the dosing ratio for each dosing channel (**NMC Pro - screens 1.1-1.2-1.3**).

Run the program (**NMC Pro - screen 2.2**).

Allow a few minutes for the pipes to fill up and the flow rate to stabilize.

Reduce the suction of the dosing channels by adjusting the manual needle valve of each dosing channel until the "target Rotameter reading" calculated in stage 1 (page 30) is attained.



NOTE

The Rotameter's scale is calibrated by the manufacturer for measurement of the flow rate of water (H₂O). Certain inaccuracies may be observed when measuring the flow rates of liquids with different densities, such as fertilizers and acids.

Check the appropriate controller screen for the measured EC and pH values (**NMC Pro - hot screen 4**).

If the desired values have been reached, check opening percentages of the dosing valves.

The EC and pH target values should be attained with the dosing valves opened to 50% - 80% of their capacity.

If the EC and pH target values are attained with the dosing valves opened less than 50%, reduce the dosing channel suction rate, until the EC and pH target values are reached.



NOTE

Every change in the flow rate of the needle valve must be updated afterwards in the controller (**NMC Pro - screen 7.6**).

DOSING CALIBRATION

If the EC and pH target values cannot be attained, and the dosing valves are opened more than 85%, measures should be taken to increase the dosing ratio - if feasible, slightly increase the concentration of the fertilizer solution and/or reduce the water flow rate to the field during irrigation.

If not - consult the agronomist/consultant.

In a field where the flow rate changes significantly from one irrigation shift to the next, try to be at a minimum of 50% opening of the dosing valve for the low-flow-rate shift, and a maximum of 80% for the high-flow-rate shift.

When the calibration process is completed, return to the EC and pH control screen in the controller, define the deviation in EC and pH values for the channels and switch the EC and pH control to ON

(NMC Pro - screen 7.7-7.6).

In the EC and pH alarm definitions, define the EC and pH deviation from the target values that, if attained, will trigger the alarm and set the EC and pH alarm to the ON position (activated) **(NMC Pro - screen 3.5-3.6).**



NOTE

EC and pH values must not exceed a $\pm 30\%$ deviation from the target values.



ATTENTION

Once a month, read the measured flow rates of the dosing channels and compare them with the flow rates defined in the controller, in order to check whether changes have occurred


(NMC Pro - screen 7.6).

After completing the calibration process, fill in the [NetaJet™ 4G Hydraulic Conditions Checklist](#) (page 45) in three copies. Make sure to fill in all the boxes in the reference row.

LIST OF PARTS

BP PL mode


See Main parts for all modes table, pages 40-41

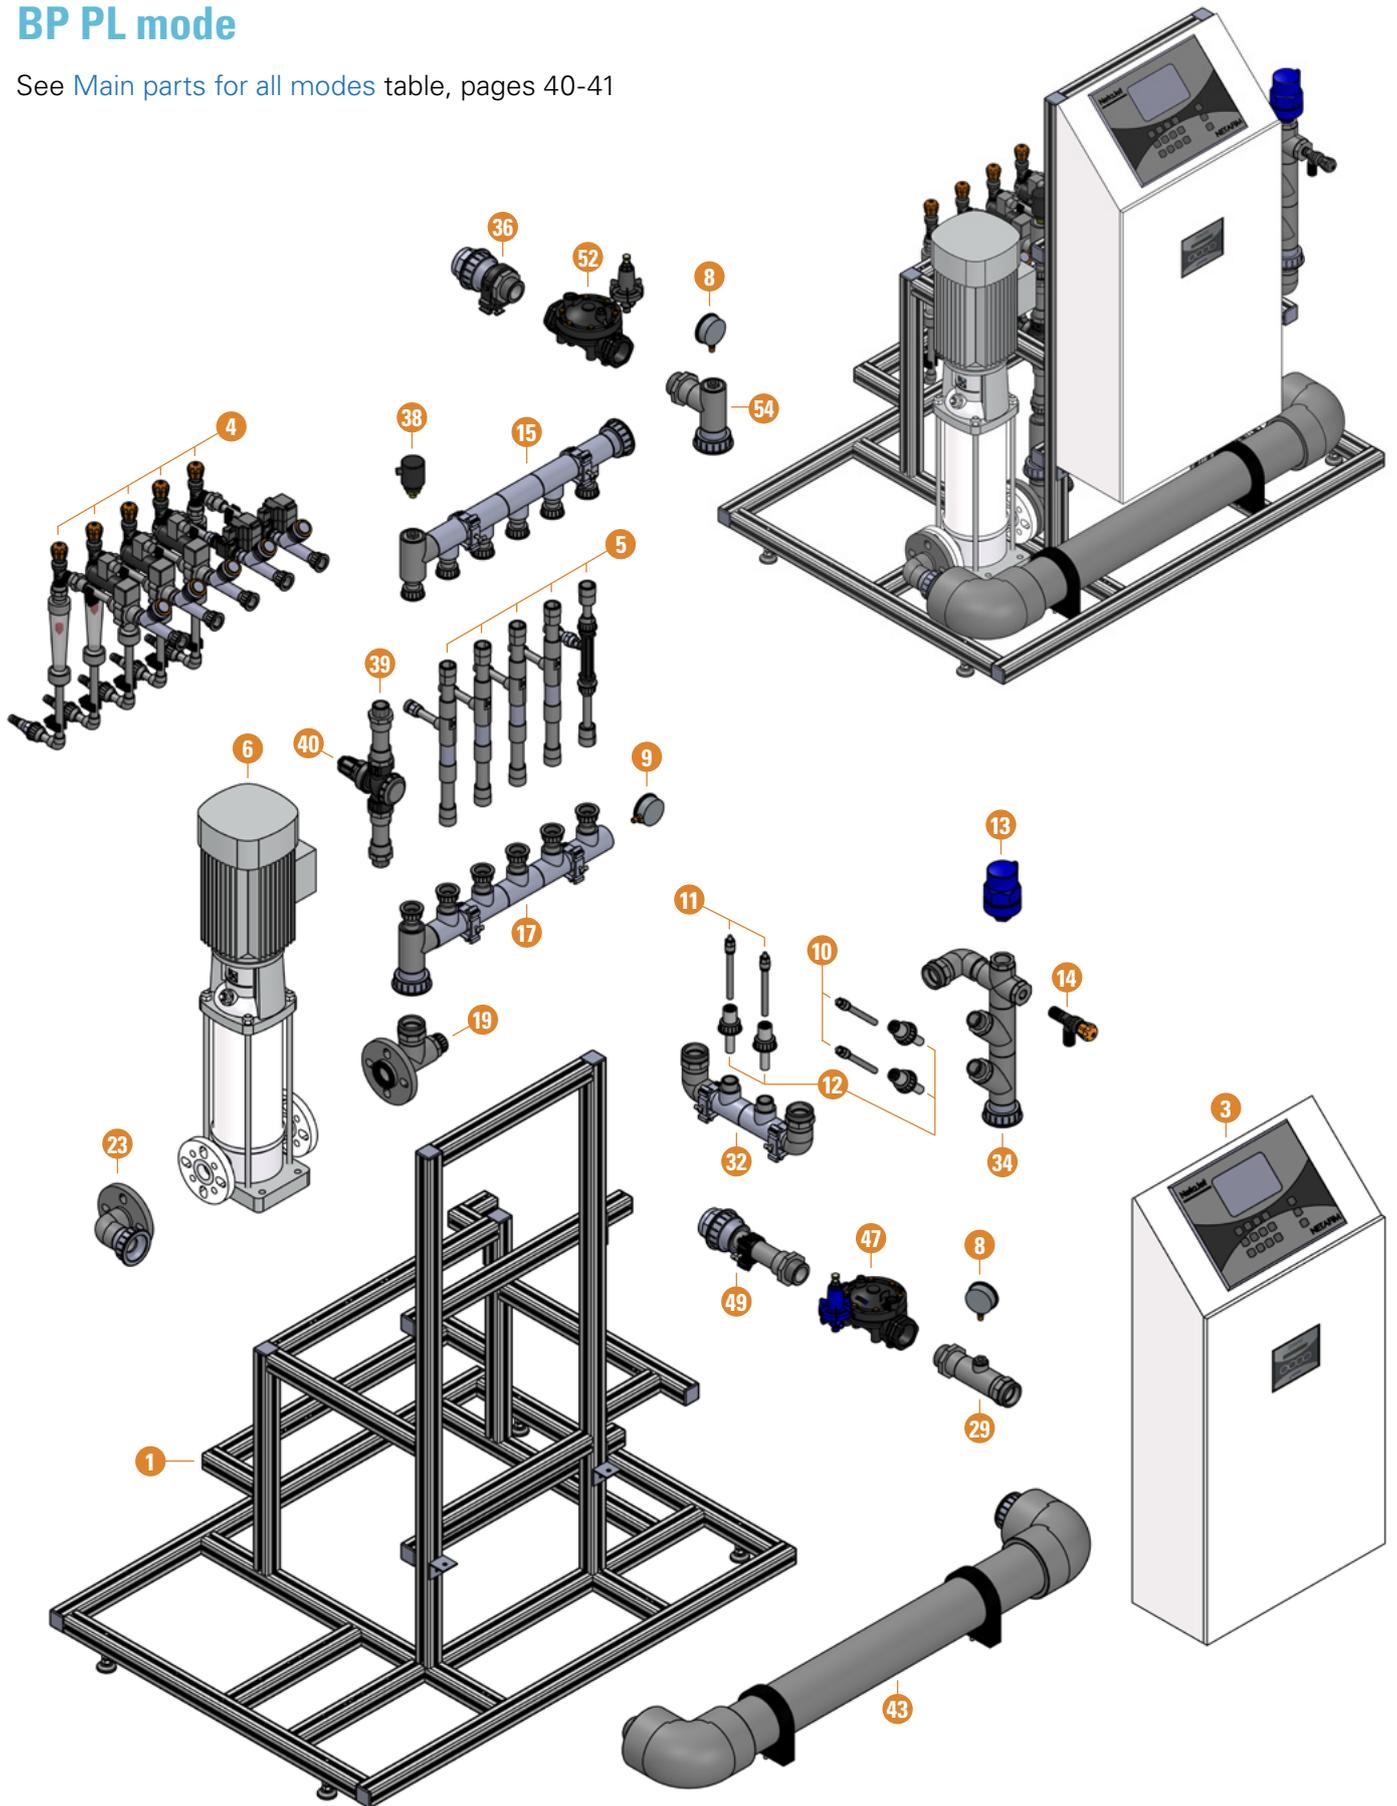

LIST OF PARTS

BP ST mode


See Main parts for all modes table, pages 40-41

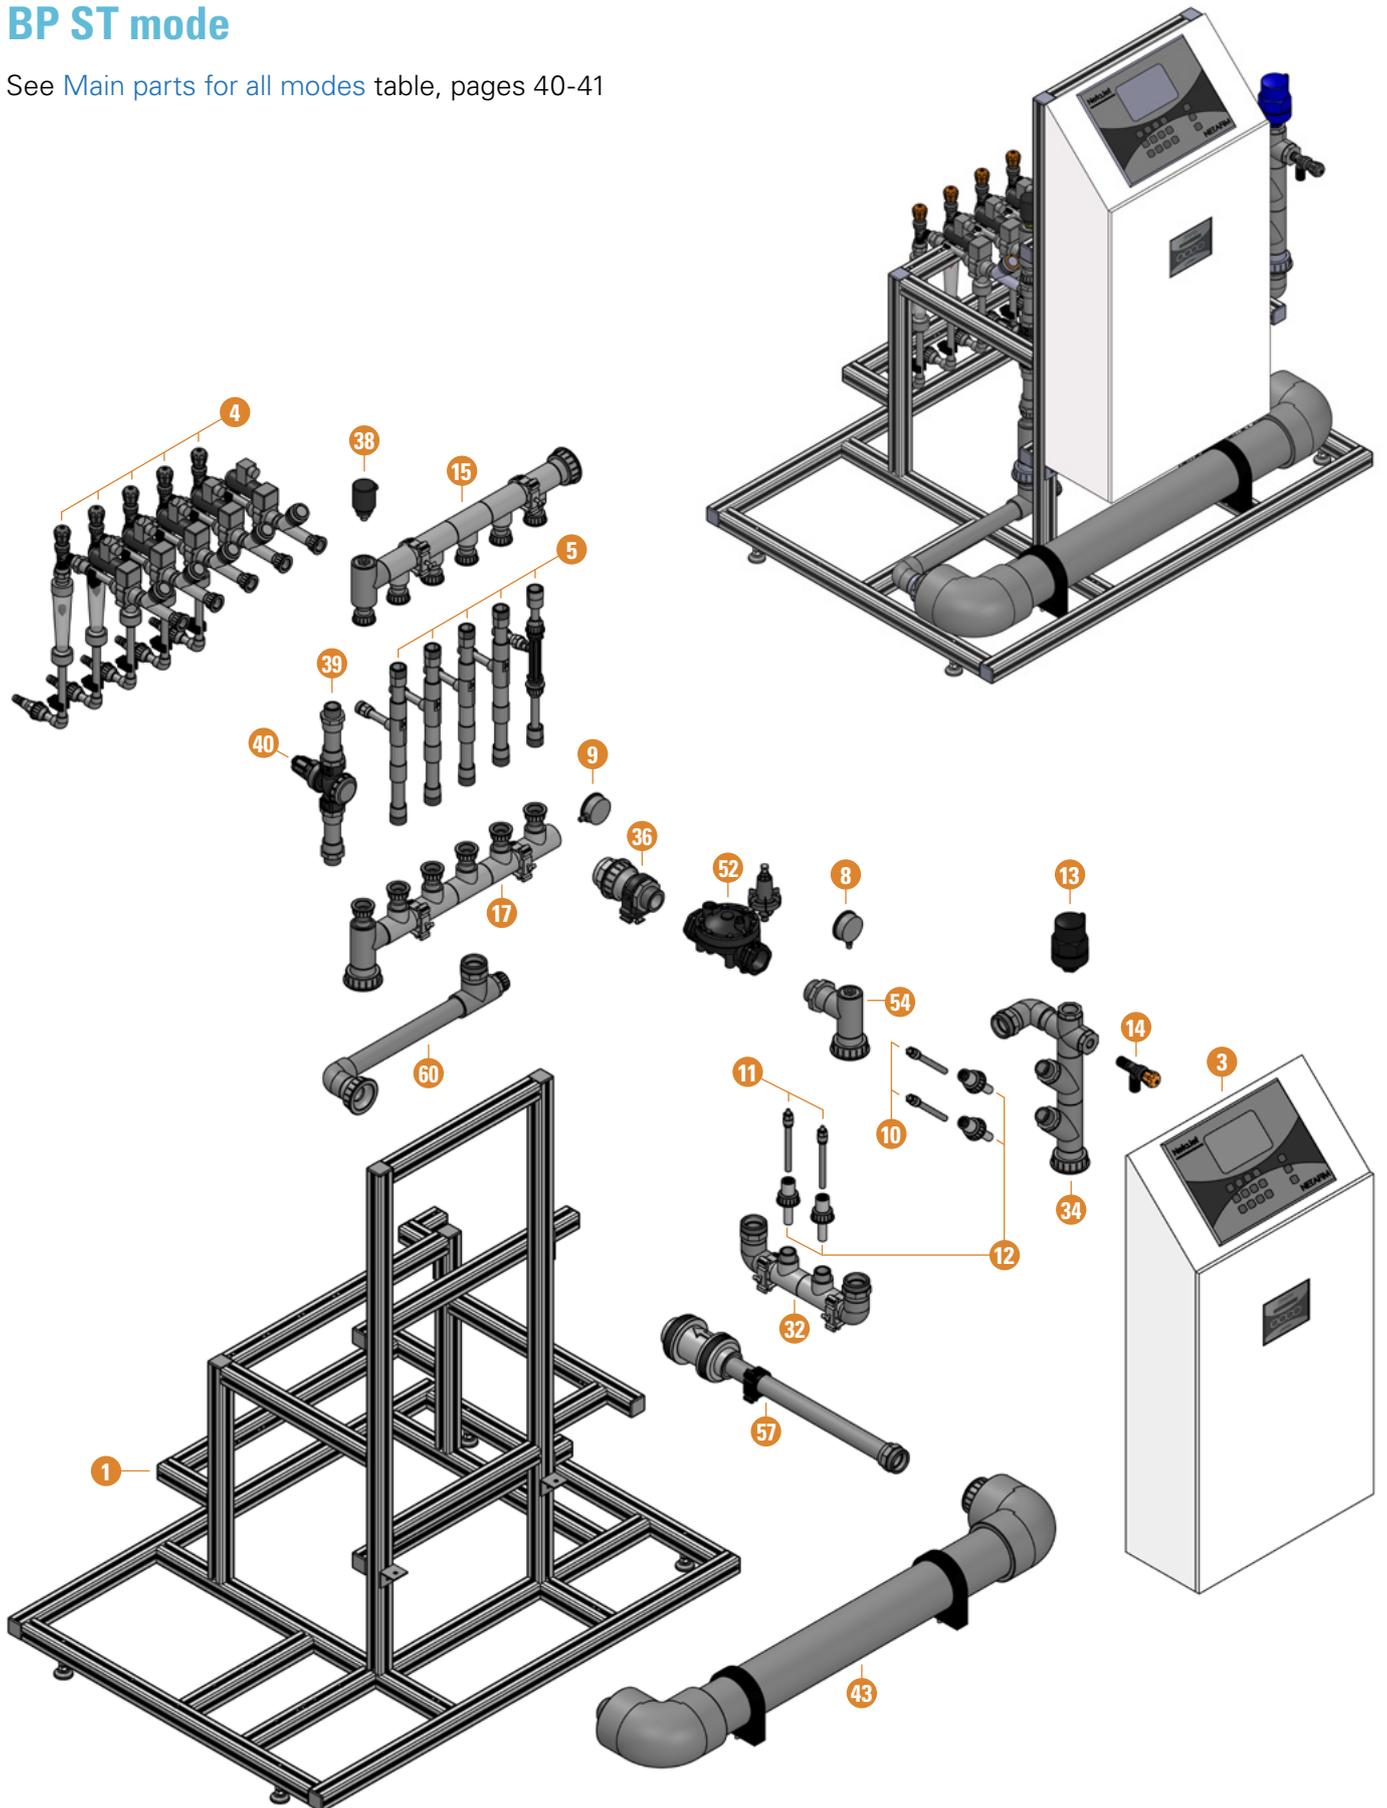

LIST OF PARTS

High-flow mode


See Main parts for all modes table, pages 40-41

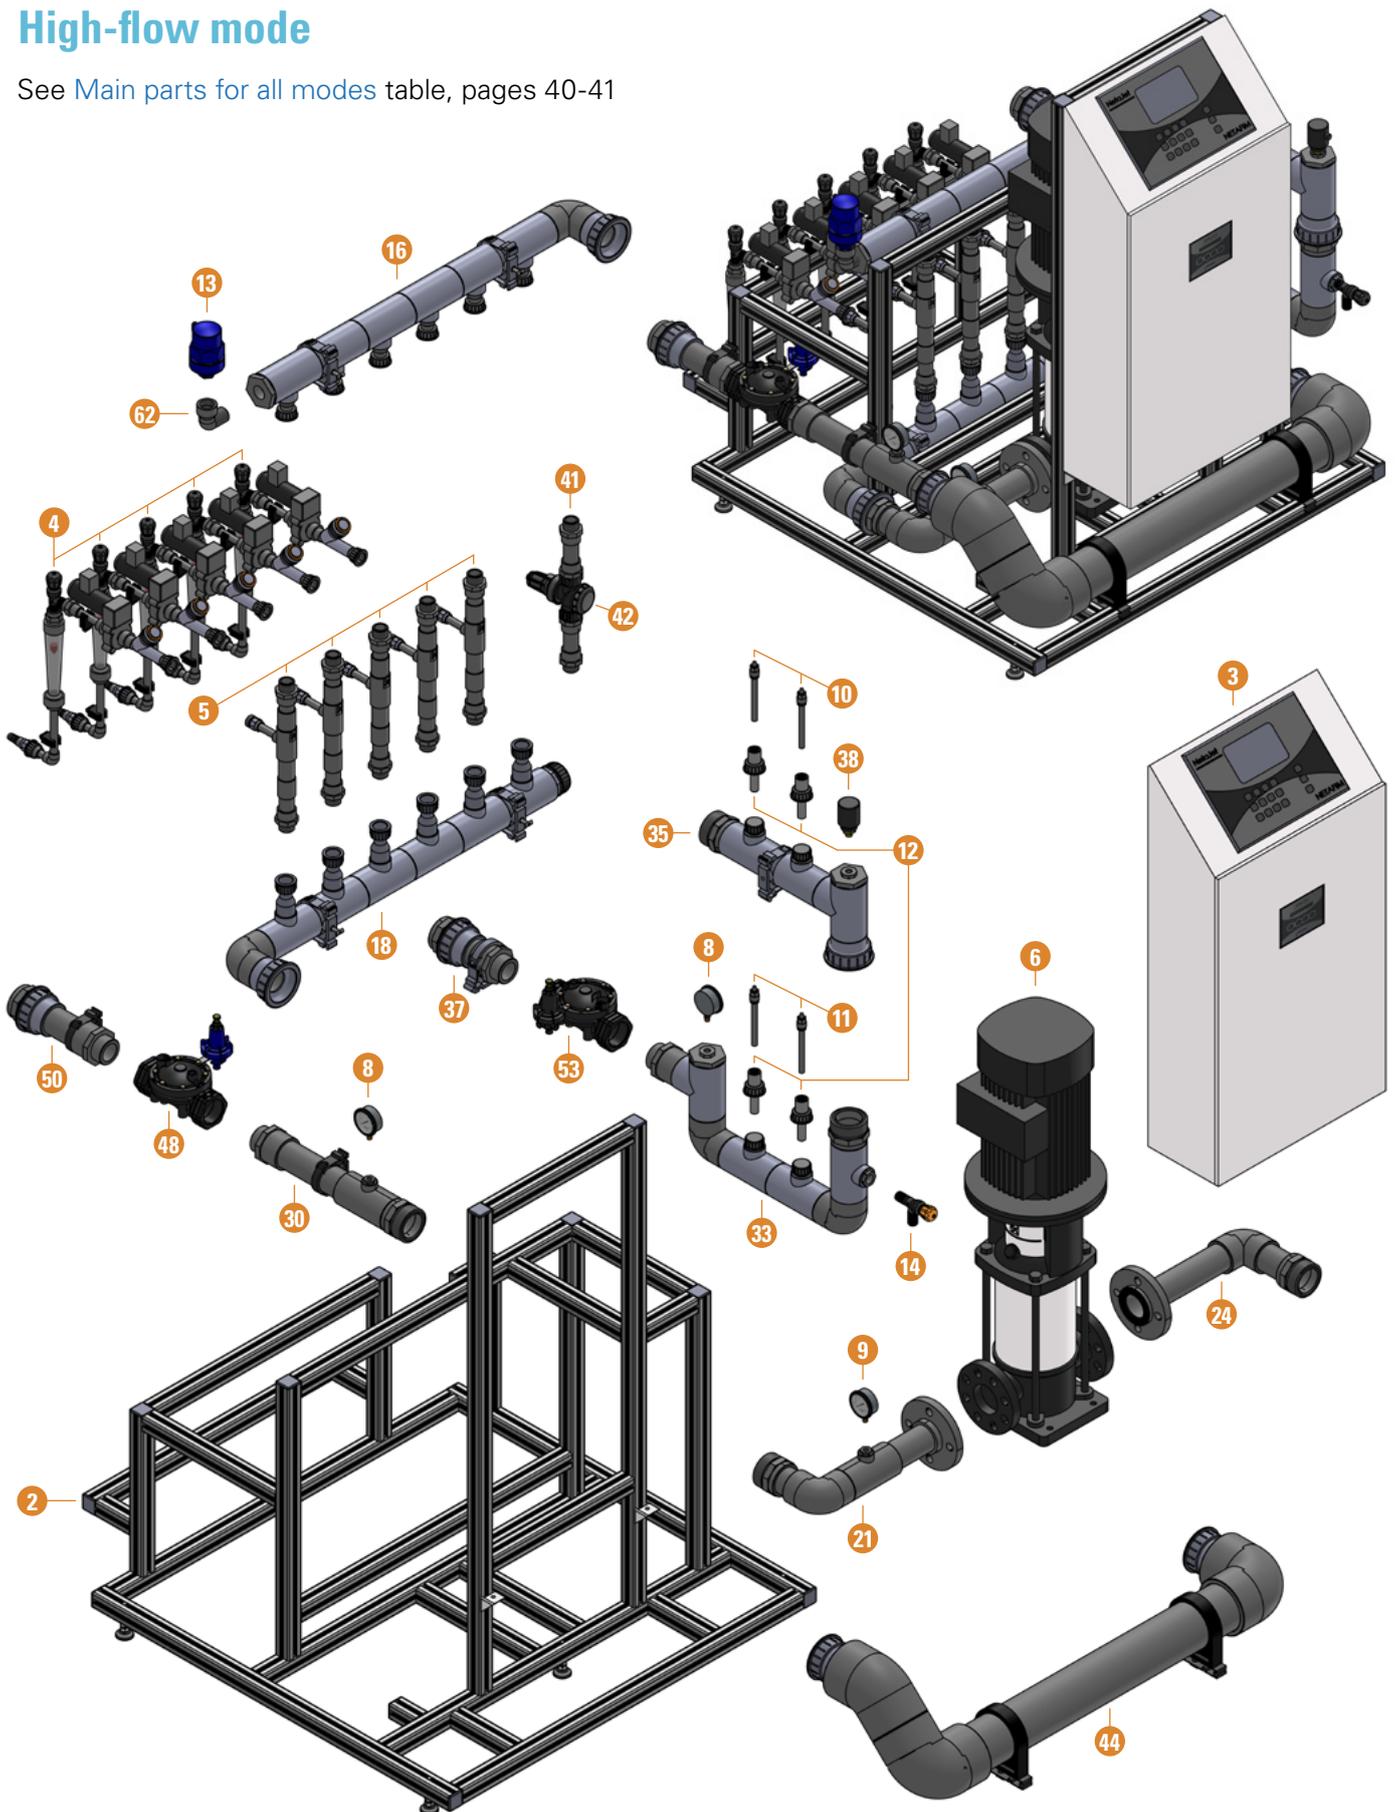

LIST OF PARTS

Octa - 8-channel mode


See Main parts for all modes table, pages 40-41

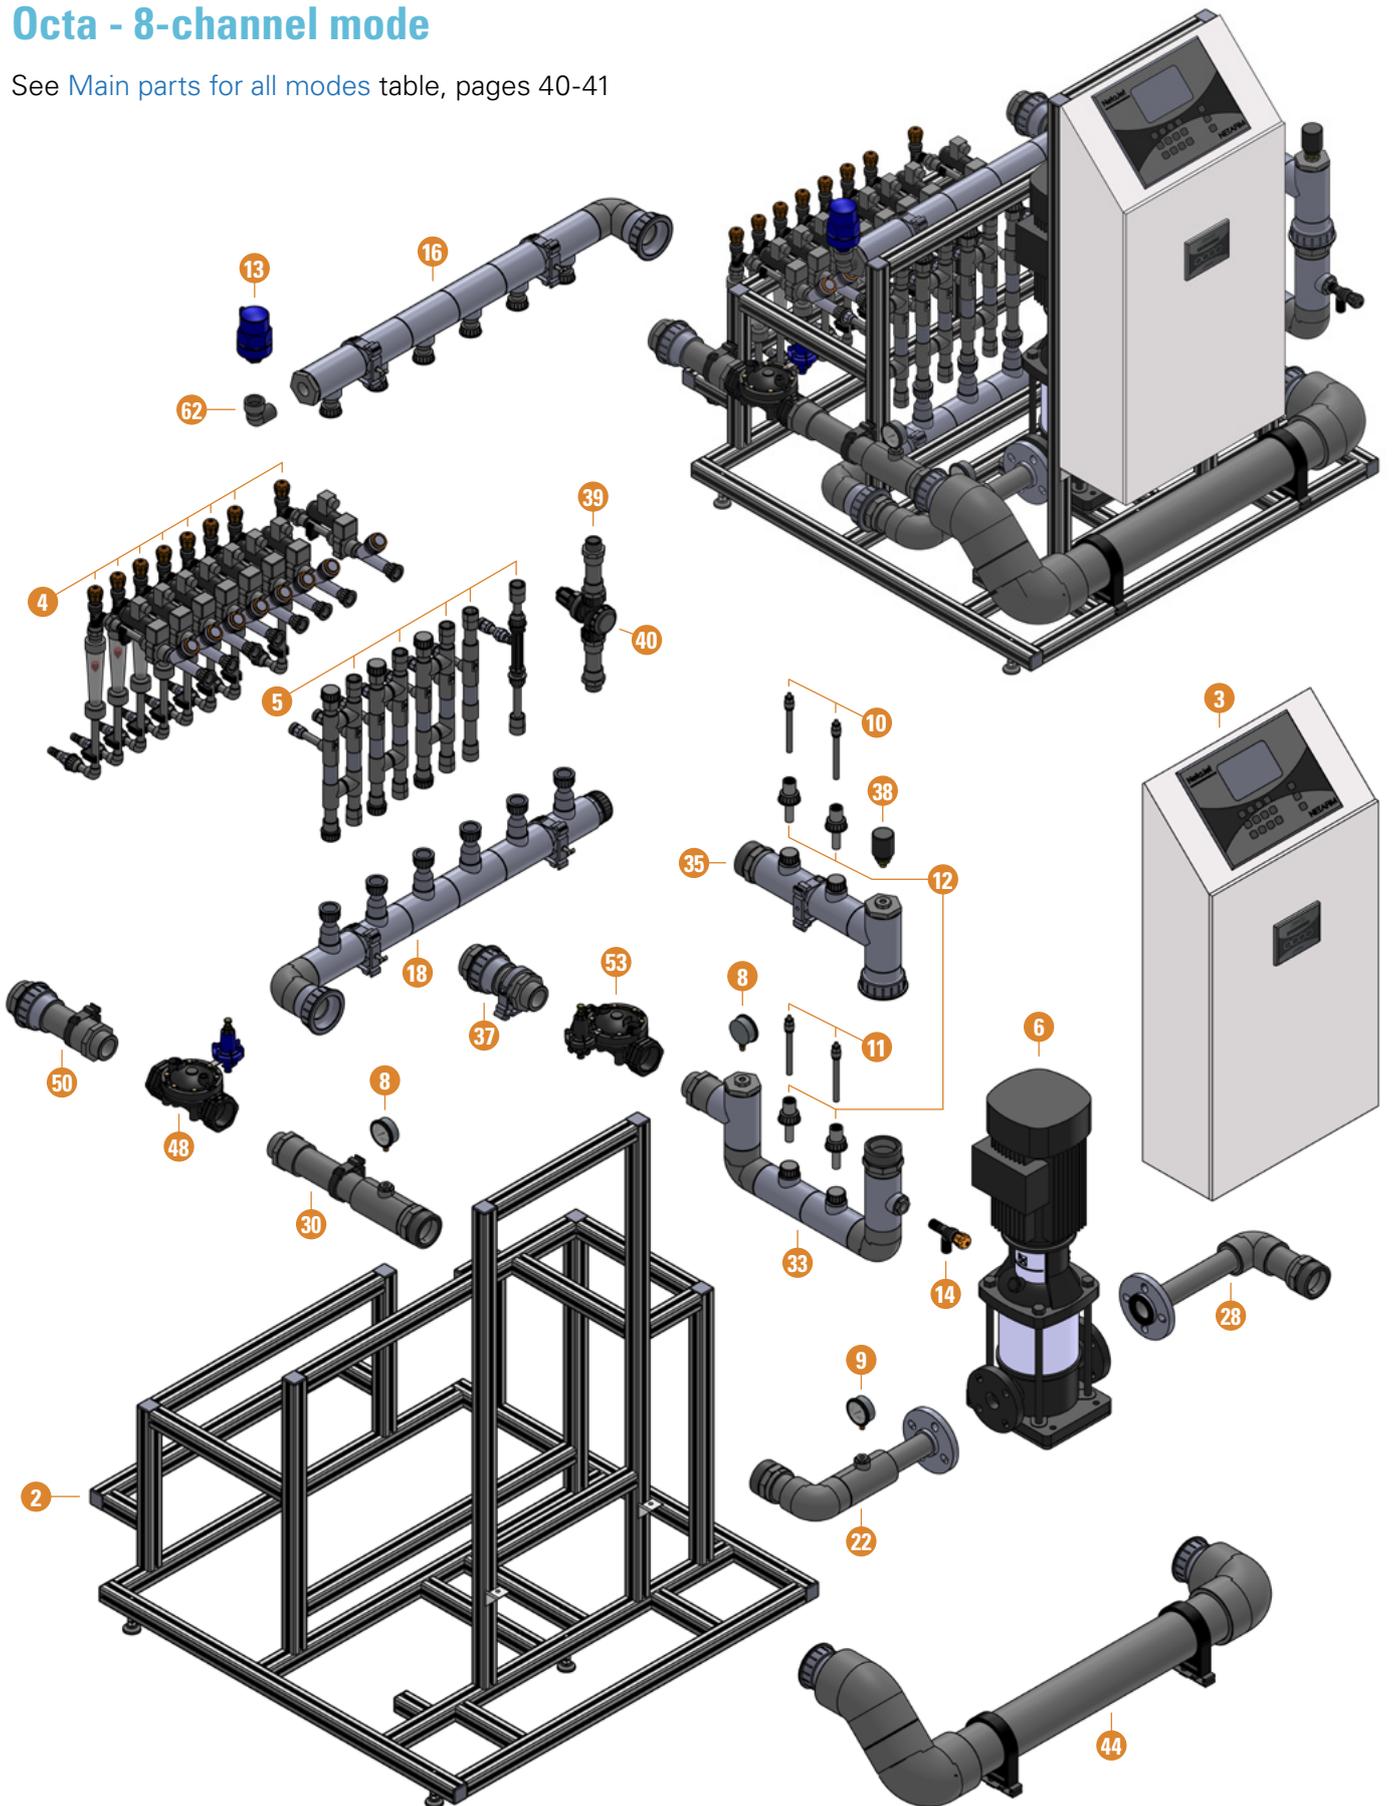

LIST OF PARTS

IL PL mode


See Main parts for all modes table, pages 40-41

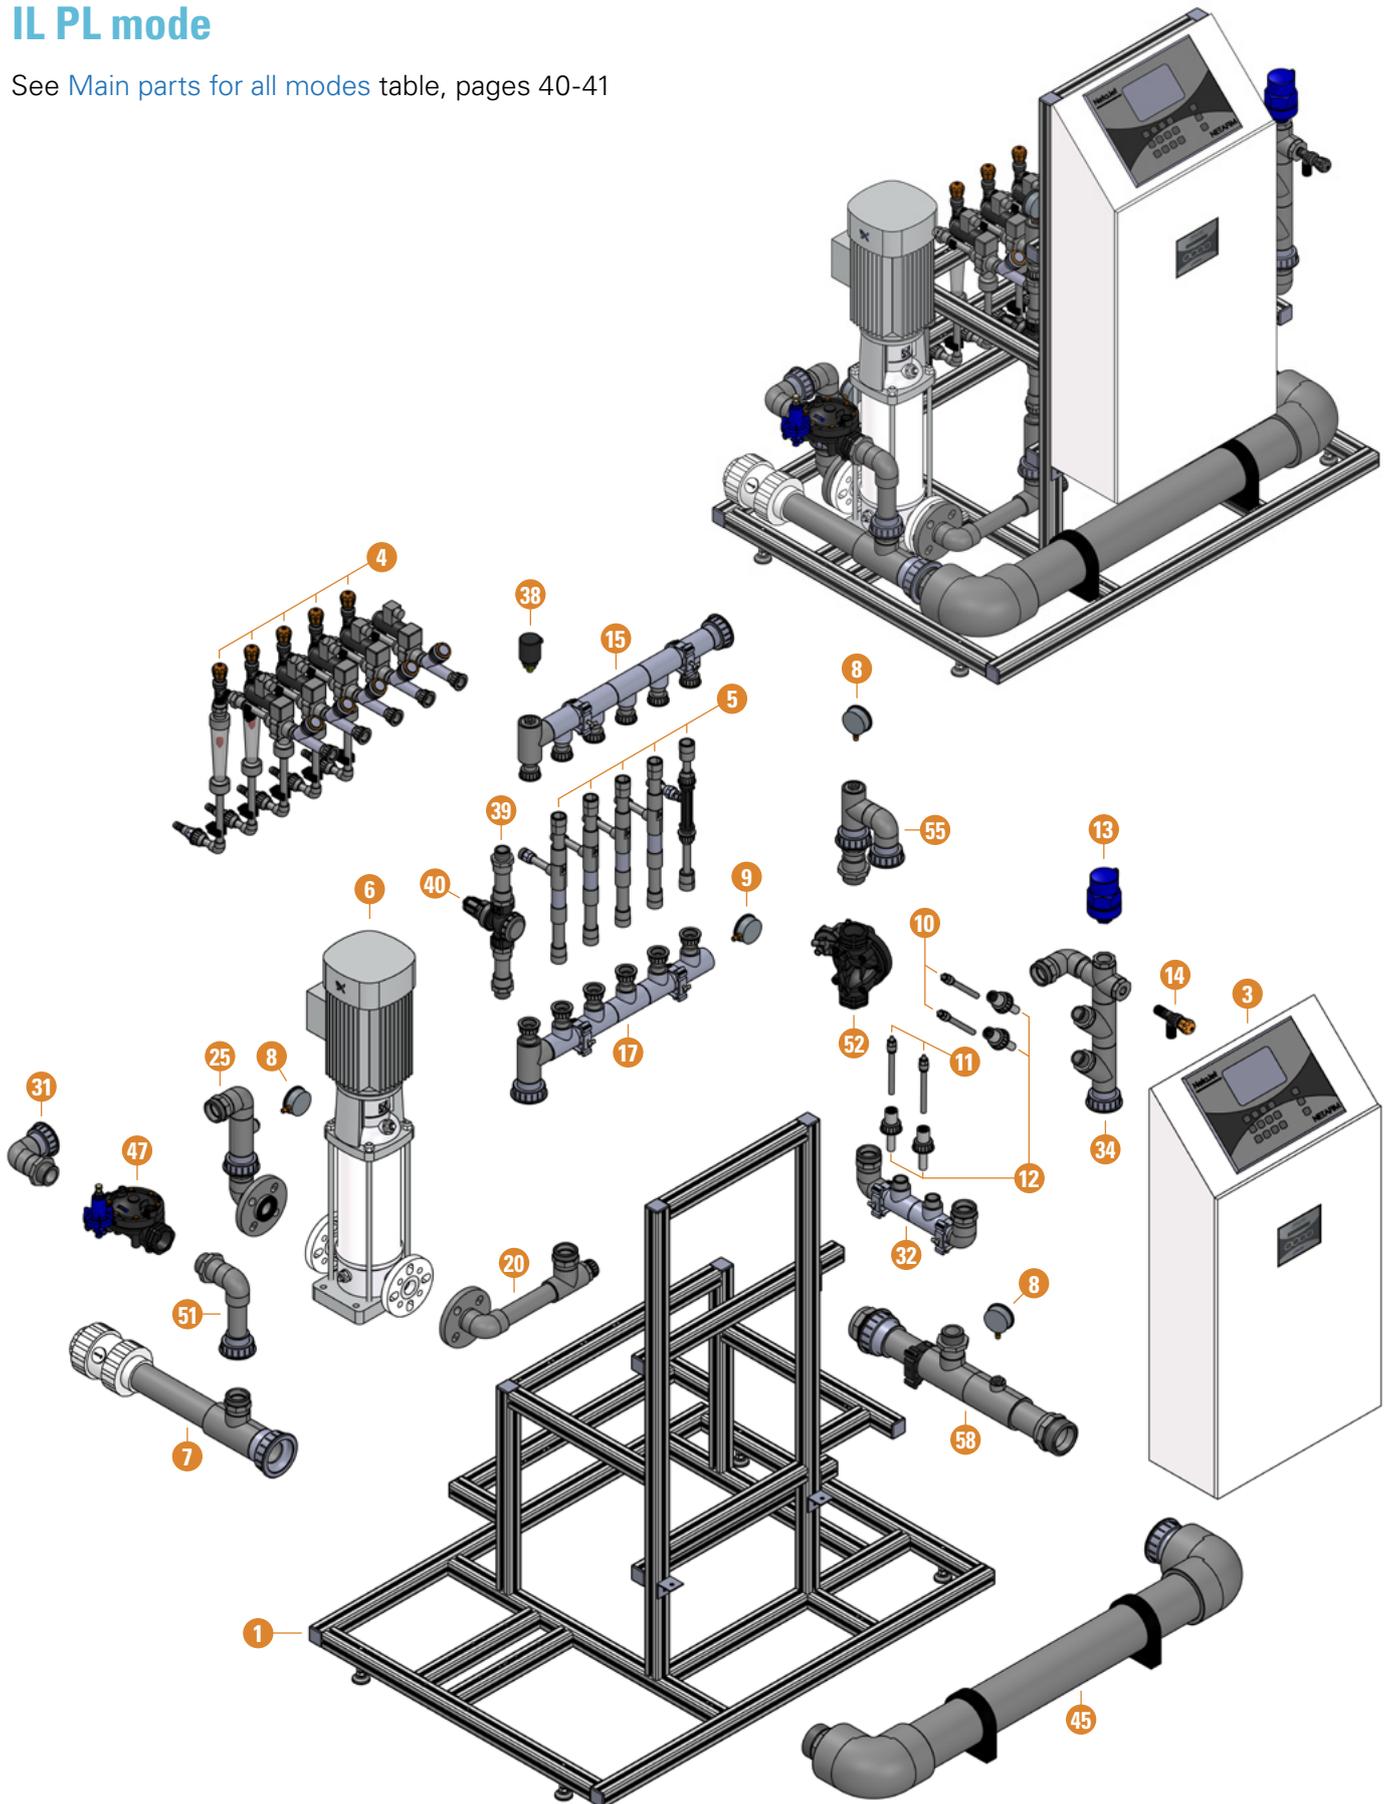

LIST OF PARTS

IL ST mode

See Main parts for all modes table, pages 40-41

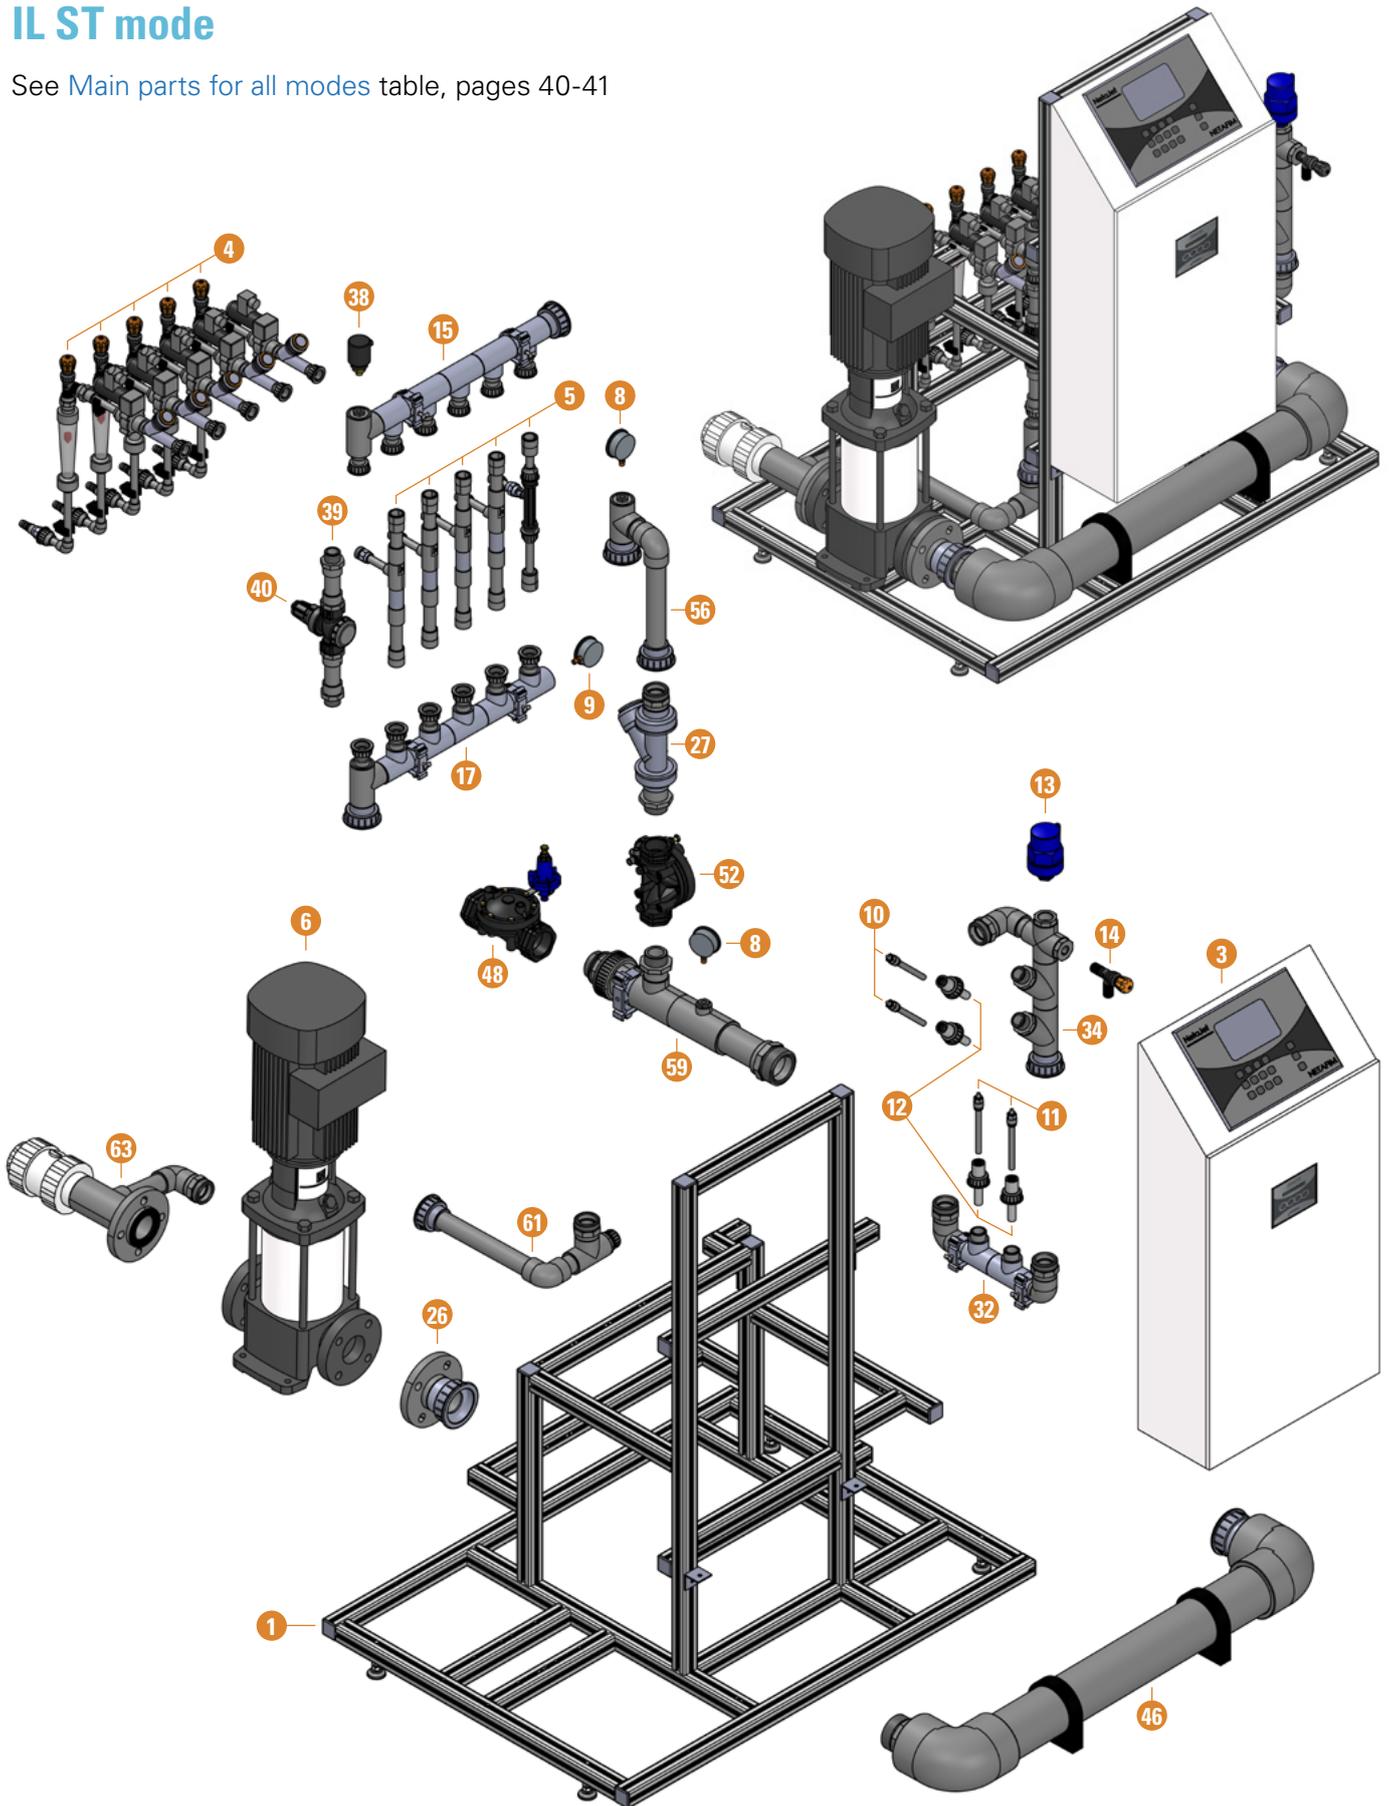

LIST OF PARTS

Main parts for all modes

Part	Description	Cat. No.
1	Aluminum frame for BP PL, BP ST, IL PL, IL ST	Not available as spare part
2	Aluminum frame for High-flow, Octa	Not available as spare part
3	Control unit	Per NetaJet™ 4G serial number*
4	Dosing channels	See Dosing channels , page 42
5	Venturis	See Venturis table, page 43
6	Dosing booster	See Dosing boosters , page 44
7	Inlet for IL PL	33152-002010
8	Pressure gauge, 250 GLZ 8 bar ¼" BSP	77540-003350
9	Vacuum gauge, model 250-1-9 ATM ¼" BSP	77540-004151
10	EC sensor, Jumo - 12 mm ,temperat comp. PT 100	45000-006705
11	pH sensor, Jumo - 12 mm, glass, BNC plug	45000-006692
12	Union adaptor set for EC/pH sensor	33140-008500
13	Barak plastic air valve ¾" BSP (DG-010)	70500-000540
14	Needle valve, ½"	76400-011375
15	Upper manifold for BP PL, BP ST, IL PL, IL ST	33152-001520
16	Upper manifold for High-flow, Octa	33152-001070
17	Lower manifold for BP PL, BP ST, IL PL, IL ST	33152-001530
18	Lower manifold for High-flow, Octa	33152-001000
19	Pump inlet for BP PL	33152-001600
20	Pump inlet for IL PL	33152-002020
21	Pump inlet for High-flow	33152-001200
22	Pump inlet for Octa	33152-001300
23	Pump outlet for BP PL	33152-001610
24	Pump outlet for High-flow	33152-001210
25	Pump outlet for IL PL	33152-002030
26	Pump outlet, 50 mm for IL ST with CRI 10 pump	33152-002270
	Pump outlet, 63 mm for IL ST with CRI 15 / CRI 20 pump	33152-002260
27	Strainer for IL ST	33152-002280
28	Pump outlet for Octa	33152-001310
29	PSV inlet for BP PL	33152-001630
30	PSV inlet for High-flow, Octa	33152-001040
31	PSV inlet for IL PL	33152-002040
32	PH manifold for BP PL, BP ST, IL PL, IL ST	33152-001510
33	PH manifold for High-flow, Octa	33152-001060
34	EC manifold for BP PL, BP ST, IL PL, IL ST	33152-001500
35	EC manifold for High-flow, Octa	33152-001010
36	PRV inlet for BP PL, BP ST	33152-001400
37	PRV inlet for High-flow, Octa	33152-001050
38	Pressure switch 1-3 bar 0.3 bar diff. ¼"	77800-002180

Continued on the next page

LIST OF PARTS

Main parts for all modes (continued)

Part	Description	Cat. No.
39	Low-flow compensation channel set	33240-007000
40	Low-flow 1" PRV P-BSP-FF-A Dir. Act., Yellow cap	71000-016380
41	High-flow compensation channel set	33152-001080
42	High-flow 1" PRV P-SP-FF-B Dir. Act., White cap	71000-016100
43	Mixing chamber for BP PL, BP ST	33152-001700
44	Mixing chamber for High-flow, Octa	33152-001020
45	Mixing chamber for IL PL	33152-002060
46	Mixing chamber for IL ST	33152-002230
47	PSV, 1½" for for BP PL, IL PL	71600-001912
48	PSV, 2" for High-flow, Octa, IL ST	71600-010611
49	PSV outlet for BP PL	33152-001620
50	PSV outlet for High-flow, Octa	33152-001030
51	PSV outlet for IL PL	33152-002050
52	PRV, 1½" for BP PL, BP ST, IL PL, IL ST	71600-001913
53	PRV, 2" for High-flow, Octa	71600-010612
54	PRV outlet for BP PL, BP ST	33152-001410
55	PRV to PH manifold for IL PL	33152-002000
56	PRV to PH manifold for IL ST	33152-002250
57	Outlet for BP ST	33152-001810
58	Outlet for IL PL	33152-002070
59	Outlet for IL ST	33152-002240
60	Outlet from lower manifold for BP ST	33152-001800
61	Outlet from lower manifold for IL ST	33152-002200
	Elbow, 90 deg. 3/4" F x 3/4" M	77300-011400
62	Inlet flange, 50 mm for IL ST with CRI 10 pump	33152-002220
	Inlet flange, 63 mm for IL ST with CRI 15 / CRI 20 pump	33152-002210


* To order spare parts, call your local Netafim™ local representative with the serial number of your NetaJet™ 4G at hand. **Only with this number we can supply the correct part for your specific NetaJet™ 4G.** The serial number is inscribed on the side of the switchbox (3530-_____).

LIST OF PARTS


Dosing channels

Description	Analog Up to 50 l/hr (13 GPH) with manual override	Analog Up to 150 l/hr (39.5 GPH) with manual override	Analog Up to 400 l/hr (105.5 GPH) with manual override	Analog Up to 600 l/hr (158.5 GPH) with manual override	Digital Up to 1000 l/hr (264 GPH)
Cat. No.	EPDM: 33152-002401	EPDM: 33152-002402	EPDM: 33152-002403	EPDM: 33152-002404	EPDM: 33230-001860
	Viton: 33152-002400				

Analog

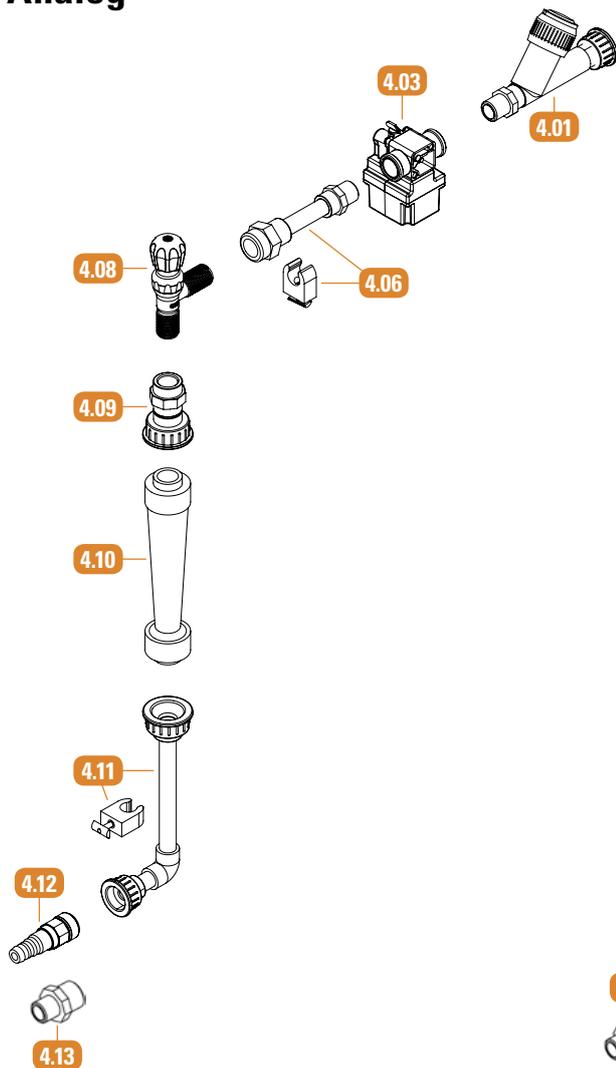

Digital




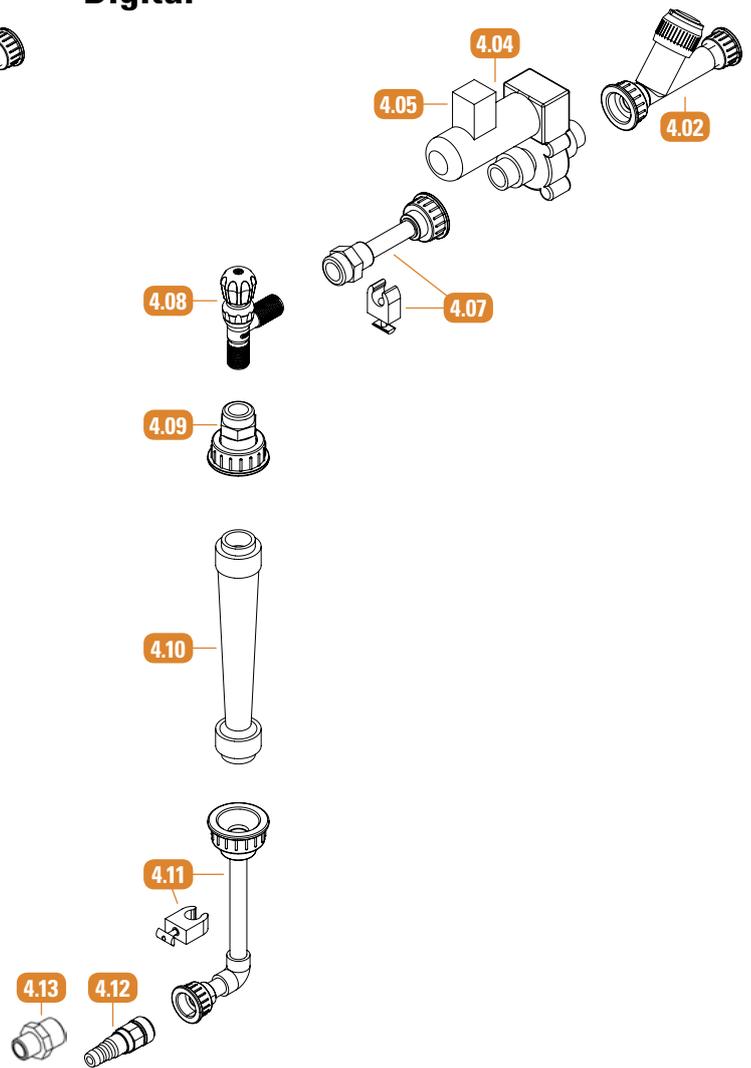


LIST OF PARTS

Dosing channel parts

Part	Description	Cat. No.
4.01	Check valve, connecting between analog EPDM dosing valve and Venturi with EPDM	76420-007965
	Check valve, connecting between analog Viton dosing valve and Venturi with Viton	76420-007960
4.02	Check valve, connecting between S22 digital dosing valve and Venturi with EPDM ISO	76420-007950
4.03	Analog EPDM dosing valve	70800-001795
	Analog Viton dosing valve	70800-001796
4.04	Digital dosing valve, S22 24VAC 50/60 Hz Viton	77540-008500
4.05	Connector and cable for S22 24VAC valve	77540-008520
4.06	Connection between needle valve and analog dosing valve	33240-004650
4.07	Connection between needle valve and S22 ISO dosing valve 1000 l/h (264 GPH)	33240-004450
4.08	Needle valve, 1/2" for 50, 150 and 400 l/h (13, 39.5 and 105.5 GPH) Rotameter	76400-011375
	Needle valve, 1/2" for 600 and 1000 l/h (158.5 and 264 GPH) Rotameter	76400-011376
4.09	Connection between needle valve and DFM170 ISO Rotameter, 50, 150 and 400 l/h (13, 39.5 and 105.5 GPH)	33240-004350
	Connection between needle valve and DFM185 ISO Rotameter, 600 and 1000 l/h (158.5 and 264 GPH)	33240-004400
4.10	Rotameter, DFM170 5-50 l/hr (1.3 - 13 GPH)	77540-007560
	Rotameter, DFM170 15-150 l/hr (4 - 40 GPH)	77540-007575
	Rotameter, DFM170 40-400 l/hr (10.6 - 106 GPH)	77540-007570
	Rotameter, DFM185 60-600 l/hr (15.8 - 158 GPH)	77540-007577
	Rotameter, DFM185 100-1000 l/hr (26.5 - 265 GPH)	77540-007580
4.11	Connection between hoze nozzle and DFM170 ISO Rotameter, 50, 150 and 400 l/h (13, 39.5 and 105.5 GPH)	33240-004250
	Connection between hoze nozzle and DFM185 ISO Rotameter, 600 and 1000 l/h (158.5 and 264 GPH)	33240-004300
4.12	Hoze nozzle for dosing channel	33240-004200
4.13	Nipple, 3/4"-1/2"	77300-010470

  Venturis

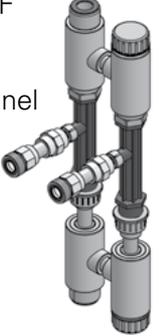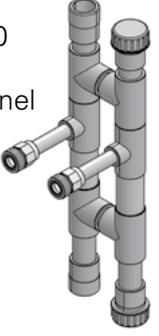Part	5.01	5.02	5.03	5.04	5.05
Description	PVDF M50 single channel 	PVDF M50 dual channel 	PVC N600 single channel 	PVC N600 dual channel 	PVC N1000 single channel 
Cat. No.	33240-003200	33152-001315	33240-002370	33152-001320	33240-002390

LIST OF PARTS

Dosing boosters

For 50 Hz installations

Pump	Mode	Mains/ rated voltage (V)	Rated power (kW)	NetaJet™ 4G total rated power (kW)	Rated current (A)	Cat. No.
CRI 5-12	BP/IL PL	3 x 220-240 or 3 x 380-415	2.2	2.35	7.70/4.45	77800-003000
CRI 5-18	BP/IL PL		3	3.15	11.0/6.30	77800-003081
CRI 10-8	Octa / IL ST		3	3.15	11,0/6,30	77800-027410
CRI 10-10	Octa, high pressure		4	4.15	13,6/7,90	77800-000063
CRI 20-5	High-flow		5.5	5.65	19,0/11,0	77800-003090
CRI 20-7	High-flow (high P)		7.5	7.65	25.0-24.2/14.4-14.0	77800-003093

For 60 Hz installations

Pump	Mode	Mains/ rated voltage (V)	Rated power (kW)	NetaJet™ 4G total rated power (kW)	Rated current (A)	Cat. No.
CRI 5-7	BP/IL PL	3 x 220-277 or 3 x 380-480	2.2	2.35	7,70-6,35/4,45-3,70	77800-003050
CRI 5-11	BP/IL PL		3	3.15	10,8-9,35/6,20-5,40	Call Netafim™
CRI 10-5	Octa / IL ST		3	3.15	10,8-9,35/6,20-5,40	77800-027420
CRI 10-6	Octa, high pressure		4	4.15	13,6-11,8/ 7,80-6,80	77800-027405
CRI 20-3	High-flow		5.5	5.65	18,4-16,2/10,6-9,30	77800-003095
CRI 20-4	High-flow (high P)		7.5	7.65	24,6-20,8/14,2-12,0	77800-003097

WARRANTY

Netafim™ warrants all the components of the NetaJet™ 4G to be free of defects in material and workmanship for 1 (one) year from the date of installation, provided the installation has been reported to Netafim™ within 30 days of installation.

If the installation was not reported or was reported later than 30 days from the date of installation, Netafim™ will warrant the NetaJet™ 4G for a period of 18 months from the date of production, according to its serial number.

If a defect is discovered during the applicable warranty period, Netafim™ will repair or replace, at its discretion, the product or the defective part.

The above does not apply to EC and pH sensors, since they are wearable. Netafim™ will warrant these items to be free of defects in material and workmanship for 3 months from the date of installation, provided the installation has been reported to Netafim™ within 30 days, or 6 months from date of production if installation was not reported or was reported later than 30 days from the date of installation.



CAUTION

When not installed, the pH sensor must be immersed in KCL solution (supplied with the sensor) or in calibration buffer 4 at a temperature of 18-25°C (64-77°F), protected from freezing and not be exposed to pressure greater than 6 bars (87 PSI).

Damage due to these causes is not covered by the warranty.

This warranty does not extend to repairs, adjustments or replacements of a NetaJet™ 4G or part that results from misuse, negligence, alteration, force majeure, lightning, power surge, improper installation or improper maintenance.

If a defect arises in your Netafim™ product during the warranty period, contact your Netafim™ supplier.

Limited warranty

This warranty is subject to the conditions in Netafim's official warranty statement.
(For the full text of Netafim's official warranty statement, please contact Netafim™).

GROW MORE WITH LESS

WWW.NETAFIM.COM